




## INSTALLATION AND OPERATION MANUAL

SOFTWARE VERSION 3.2x  
code 80215D / Edition 12 - 03/08

### 1 • INSTALLATION

#### • Dimensions and cut-out; panel mounting

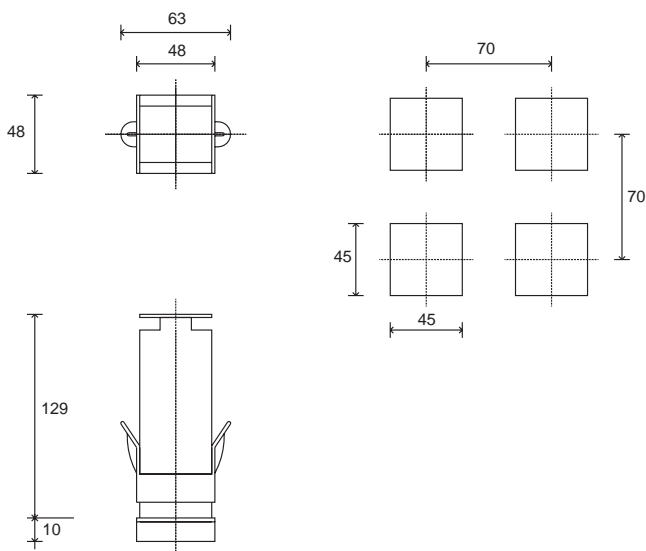

For correct and safe installation, follow the instructions and observe the warnings contained in this manual.

**Panel mounting:**

To fix the unit, insert the brackets provided into the seats on either side of the case. To mount two or more units side by side, respect the cut-out dimensions shown in the drawing.

**CE MARKING:** EMC conformity (electromagnetic compatibility) with EEC Directive 89/336/CEE with reference to the generic Standard EN61000-6-2 (immunity in industrial environments) and EN50081-1 (emission in residential environments). BT (low voltage) conformity respecting the Directive 73/23/CEE modified by the Directive 93/68.

**MAINTENANCE:** Repairs must be done only by trained and specialized personnel. Cut power to the device before accessing internal parts. Do not clean the case with hydrocarbon-based solvents (Petrol, Trichlorethylene, etc.). Use of these solvents can reduce the mechanical reliability of the device. Use a cloth dampened in ethyl alcohol or water to clean the external plastic case.

**SERVICE:** GEF 800P has a service department. The warranty excludes defects caused by any use not conforming to these instructions.

### 2 • TECHNICAL SPECIFICATIONS

Display	2 x 4 digits, green, height 10 and 7mm
Keys	4 mechanical keys (Man/Auto, INC, DEC, F)
Accuracy	0.2% full scale at 25°C room temperature
Main input	TC, RTD (Pt100 - JPT100), PTC, 50mV Ri ≥ 1MΩ; 10V Ri ≥ 10KΩ; 20mA, Ri = 50Ω
Thermocouples	IEC 584-1 (J, K, R, S, T, B, E, N, Ni-Ni18Mo, L NiCr-CuNi)
Cold junction error	0,1° / °C
RTD type (scale configurable within indicated range, with or without decimal point)	DIN 43760 (Pt100, JPT100)
PTC type (on request)	990Ω, 25°C
Max line resistance for RTD	20Ω
Safety	detection of short-circuit or opening of probes, LBA alarm, HB alarm
°C / °F selection	configurable from faceplate
Linear scale ranges	-1999 to 9999 with configurable decimal point position
Controls	PID, Self-tuning, on-off
pb / dt / di	0.0 ... 999.9% / 0.00 ... 99.99min / 0.00 ... 99.99min
Action	Heat / Cool
Control outputs	on / off, pwm
Cycle time	0.1 ... 200 sec
Main output type	Relay, Logic, Continuous (optional)
Softstart	0.0 ... 500.0 min
Maximum power limit heat / cool	0.0 ... 100.0 %
Fault power setting	-100.0 ... 100.0 %
Automatic blanking	Optional exclusion, displays PV value
Configurable alarms	3 configurable alarms type: max, min, symmetrical, absolute or relative, LBA, HB
Alarm masking	- exclusion during warm up - latching reset from faceplate or external contact
Type of relay contact	NO (NC), 5A, 250V, cosφ = 1
Logic output for static relays	11Vdc, Rout = 220Ω (6V/20mA)
Remote setpoint or ammeter input (options)	0 ... 10V, 2 ... 10V, Ri ≥ 1MΩ 0 ... 20mA, 4 ... 20mA, Ri = 5Ω Potentiometer > 500Ω, CT 50mAac, 50/60Hz, Ri = 1,5Ω, isolation 1500V
CT scale range	configurable from 0, ... , 100.0A
Transmitter power supply (optional)	filtered 10 / 24Vdc, max 30mA short-circuit protection, isolation 1500V
Analogue retransmission signal (opt)	10V / 20mA, isolation 1500V
Logic inputs (optional)	24V NPN, 4.5mA; 24V PNP, 3.6mA isolation 1500V
Serial interface (optional)	CL; RS422/485; RS232; isolation 1500V
Baud rate	1200 ... 19200
Protocol	GEFRAN / MODBUS
Power supply (switching type)	(std) 100 ... 240Vac/dc ±10%; 50/60Hz, 12VA max (opz.) 20...27Vac/dc ±10%; 50/60Hz, 12VA max
Faceplate protection	IP65
Working / Storage temperature range	0...50°C / -20...70°C
Relative humidity	20 ... 85% Ur non-condensing
Environmental conditions of use	for internal use only, altitude up to 2000m
Installation	Panel, plug-in from front
Weight	210g (complete version)

EMC conformity has been tested with the following connections

FUNCTION	CABLE TYPE	LENGTH
Power supply cable	1 mm <sup>2</sup>	1 m
Relay output cable	1 mm <sup>2</sup>	3,5 m
Digital communication wires	0,35 mm <sup>2</sup>	3,5 m
C.T. connection cable	1,5 mm <sup>2</sup>	3,5 m
TC input	0,8 mm <sup>2</sup> compensated	5 m
Pt100 input	1 mm <sup>2</sup>	3 m

### 3 • DESCRIPTION OF FACEPLATE

**Function indicator:**  
Indicates modes of operation  
MAN = OFF (Automatic control)  
MAN = ON (Manual control)  
AUX = ON (program in reset)  
PRG = ON (program running)

**Indication of output states**  
OUT 1 (Main); OUT 2 (AL 1);  
OUT 3 (AL 2); OUT 4 (HB)

**Auto / Manual selection**  
Only active in level 1 menu

**"Raise" and "Lower" key**  
Press to increment (decrement) any numerical parameter •• Increment (decrement) speed is proportional to time key stays pressed •• The operation is not cyclic: once the maximum (minimum) value of a field is reached, the value will not change even if the key remains pressed.

**PV Display:** Indication of process variable  
Error Indication: LO, HI, Sbr, Err  
**LO** = the value of process variable is < di LO\_S  
**HI** = the value of process variable is > di HI\_S  
**Sbr** = faulty sensor or input values higher than max. limits  
**Err** = PT100 third wire opened for PT100, PTC or input values lower than min. limits (i.e.: TC wrong connection)

**SV display:** Indication of setpoint

**Function key:**  
Gives access to the various configuration phases •• Confirms change of set parameters and browses next or previous parameter (if Auto/Man key is pressed)

### 4 • CONNECTIONS

**Serial line**

Configurable serial line isolated to 1500V  
Passive current loop (max. 1200 baud)

RS422/485 or RS232 (optional)

**Outputs**

Out4 (AL3/HB) (W1)	7	User configurable generic output	6	Out3 (AL2)
	8	- 5A/250Vac relay, cosφ=1 - 11Vdc logic, Rout = 220Ω (6V/20mA) - analogue output isolated to 1500V (0...10V, 0...20/4...20mA)	5	

**Outputs**

Out2 (AL1)	19	User configurable generic output	3	Pt100 2-wires or PTC
	20	- 5A/250Vac relay, cosφ = 1 - 11Vdc logic, Rout = 220Ω (6V/20mA)	2	
Out1 (Main)	21		1	
	22			Pt100 3-wires

**Power Supply**

PWR

~ 23

~ 24

Standard: 100...240Vac/Vdc  
Optional: 20...27Vac/Vdc  
50/60Hz

**Auxiliary inputs**

- ~ 14

+ ~ 13

Auxiliary input isolated 1500V  
Current transformer 50mAac, 1,5Ω, 50/60Hz  
Remote setpoint 0...20, 4...20mA, 5Ω  
0...1V, 0...10V, > 1MΩ

**Transmitter supply**

GND 11

+ Vt 12

Transmitter supply isolated 1500V  
10/24Vdc, max. 30mA short-circuit protection

**Digital inputs / Out 5**

Out 5 analogue (W2) (alternative to IN2 digital input)

(\*) terminal 11 if Out 4 is Relay or Logic

9 +

7 COM (\*)

Digital input isolated to 1500V  
- NPN 24V, 4,5mA  
- PNP 24V, 3,6mA (12V, 3,6mA)  
(In alternative Out 5)

9 IN2

10 IN1

11 COM

**Inputs**

Use wires of adequate diameter (min. 1mm<sup>2</sup>)  
PT100, PTC  
JPT100, PTC

**TC**

Available thermocouples: J, K, R, S, T, B, E, N, Ni-Ni18Mo, L NiCr-CuNi  
- Observe polarities  
- For extensions, use the correct compensating cable for the type of TC used

**Linear (V)**


Linear input in dc voltage  
0...50mV, 10...50mV, 0...10V, 2...10V  
Potentiometer 0...10V

**Linear (I)**


Linear input in dc current  
0...20mA, 4...20mA

**TOP**


### 5 • RECOMMENDED WIRING LAYOUT

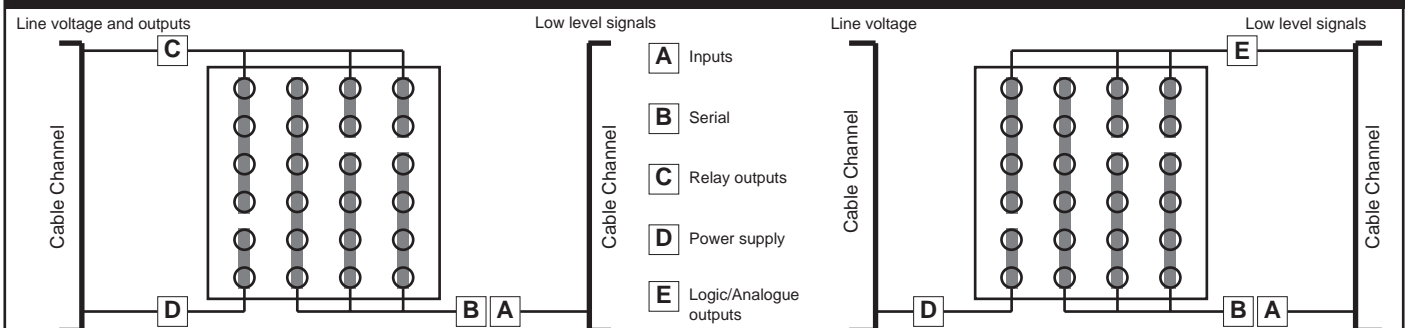

# Unit layout

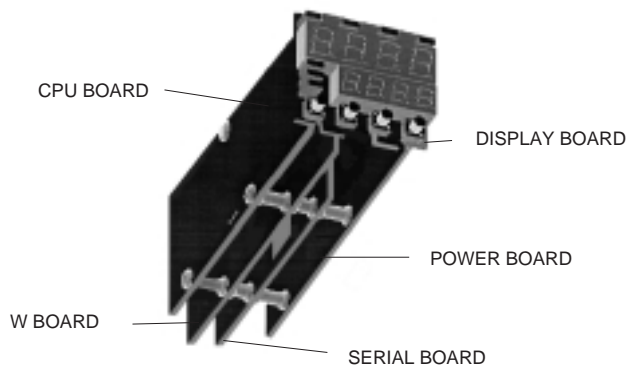


## 5 • PROGRAMMING and CONFIGURATION

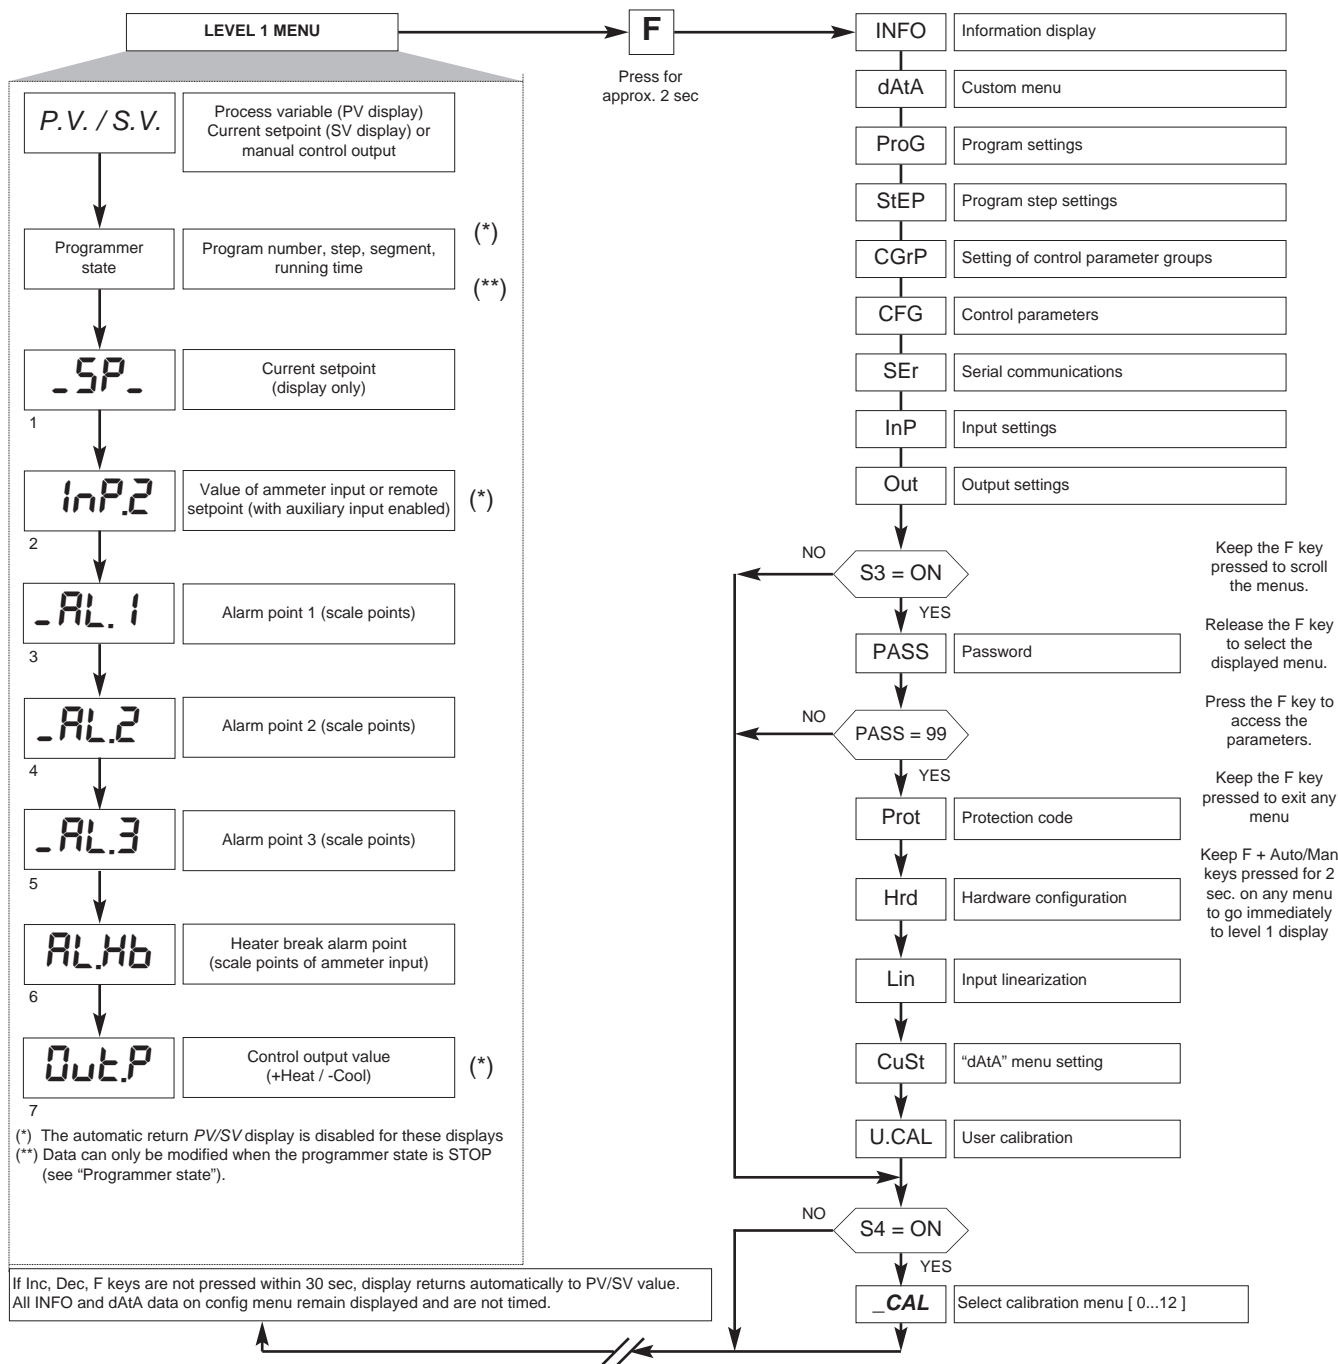


**Nota:** Once a particular configuration is entered, all unnecessary parameters are no longer displayed

## • InFo Display

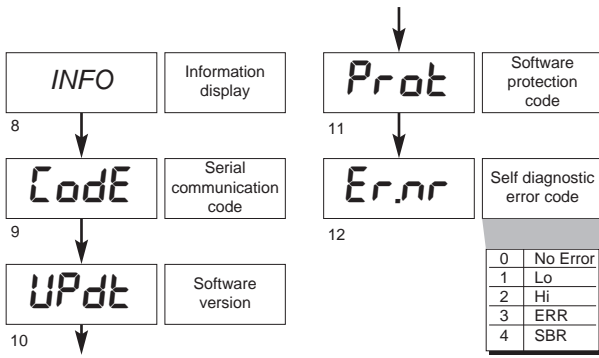


## • ProG

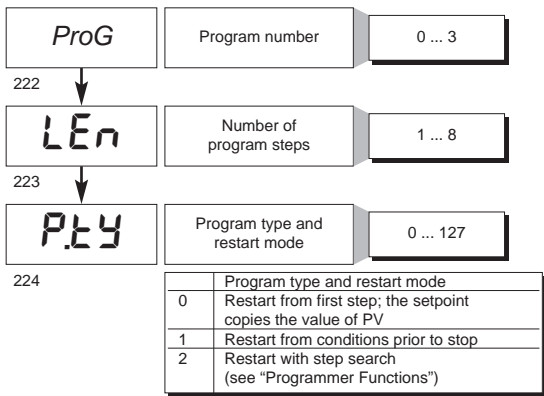


- + 8 Wait for STOP / START switching
- + 16 Continuous loop; at end of cycle the program restarts from first step (excludes +32 function)
- + 32 At end of cycle the control output goes to "FAcP" value, set in "CFG" menu
- +64 Fast simulation (see "Programmer Functions")

## • StEP

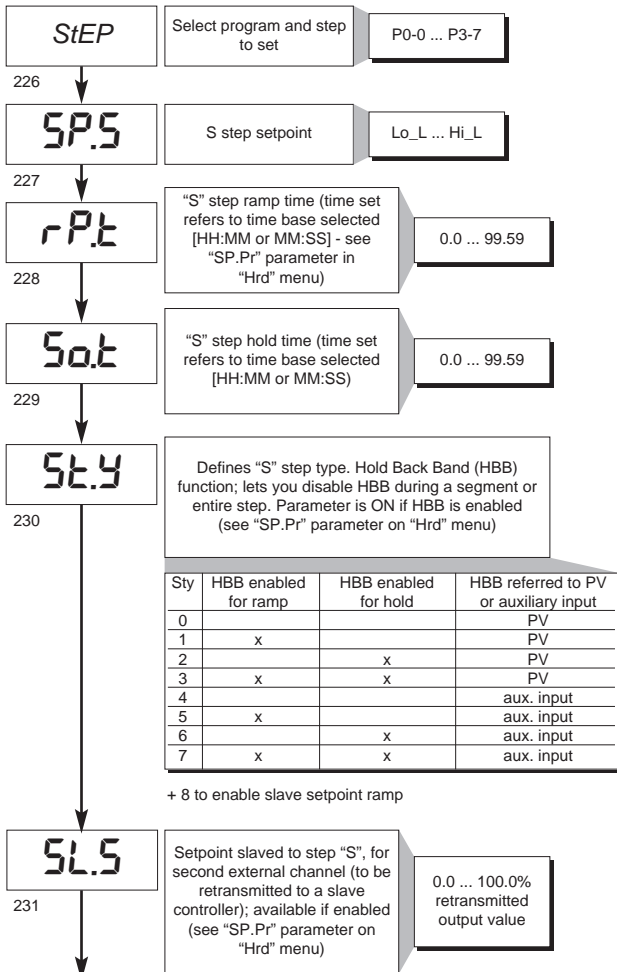



Eu.r or Eu.S	Event 1	Event 2	Event 3	Event 4
0	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON

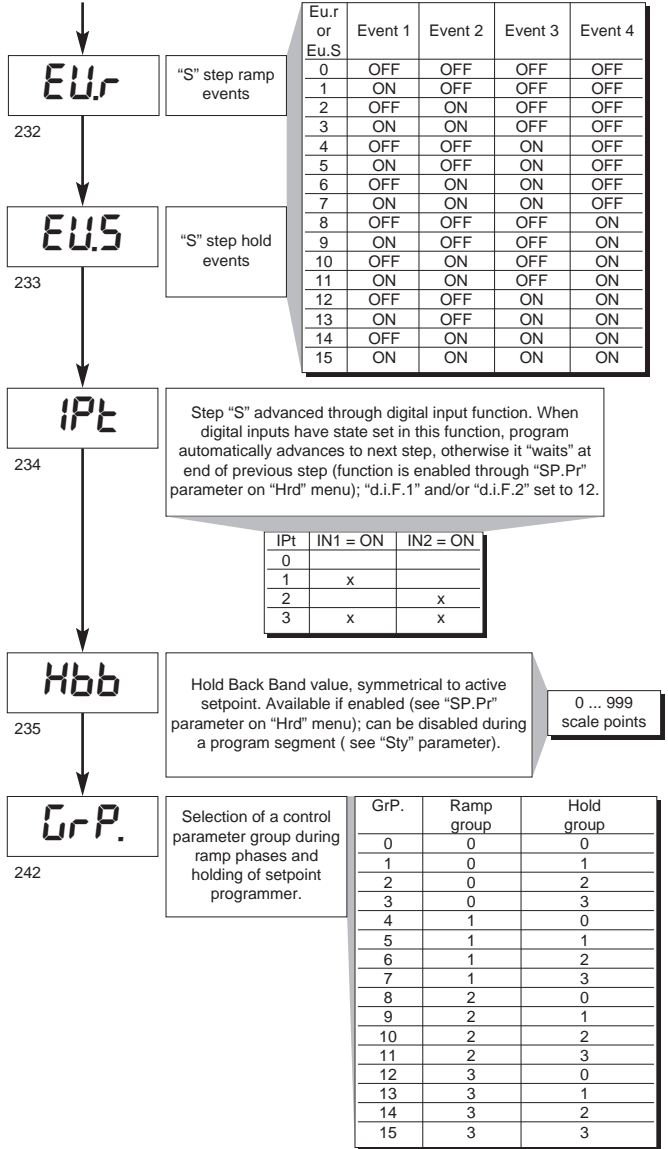



+ 16 to force the power limit of group 0 when in "hold" phase

## • C.GrP



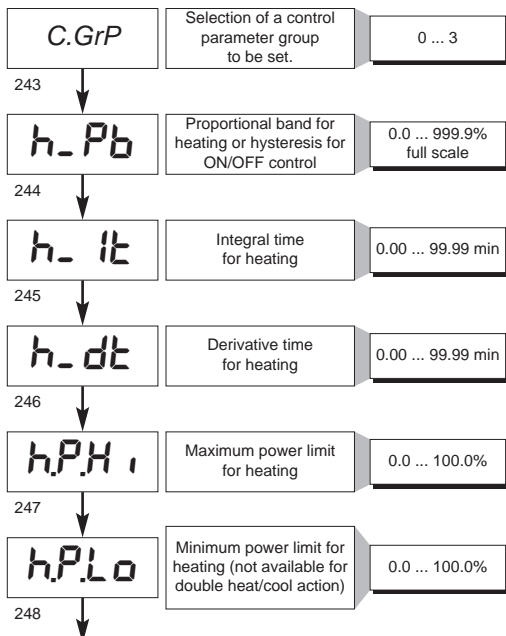


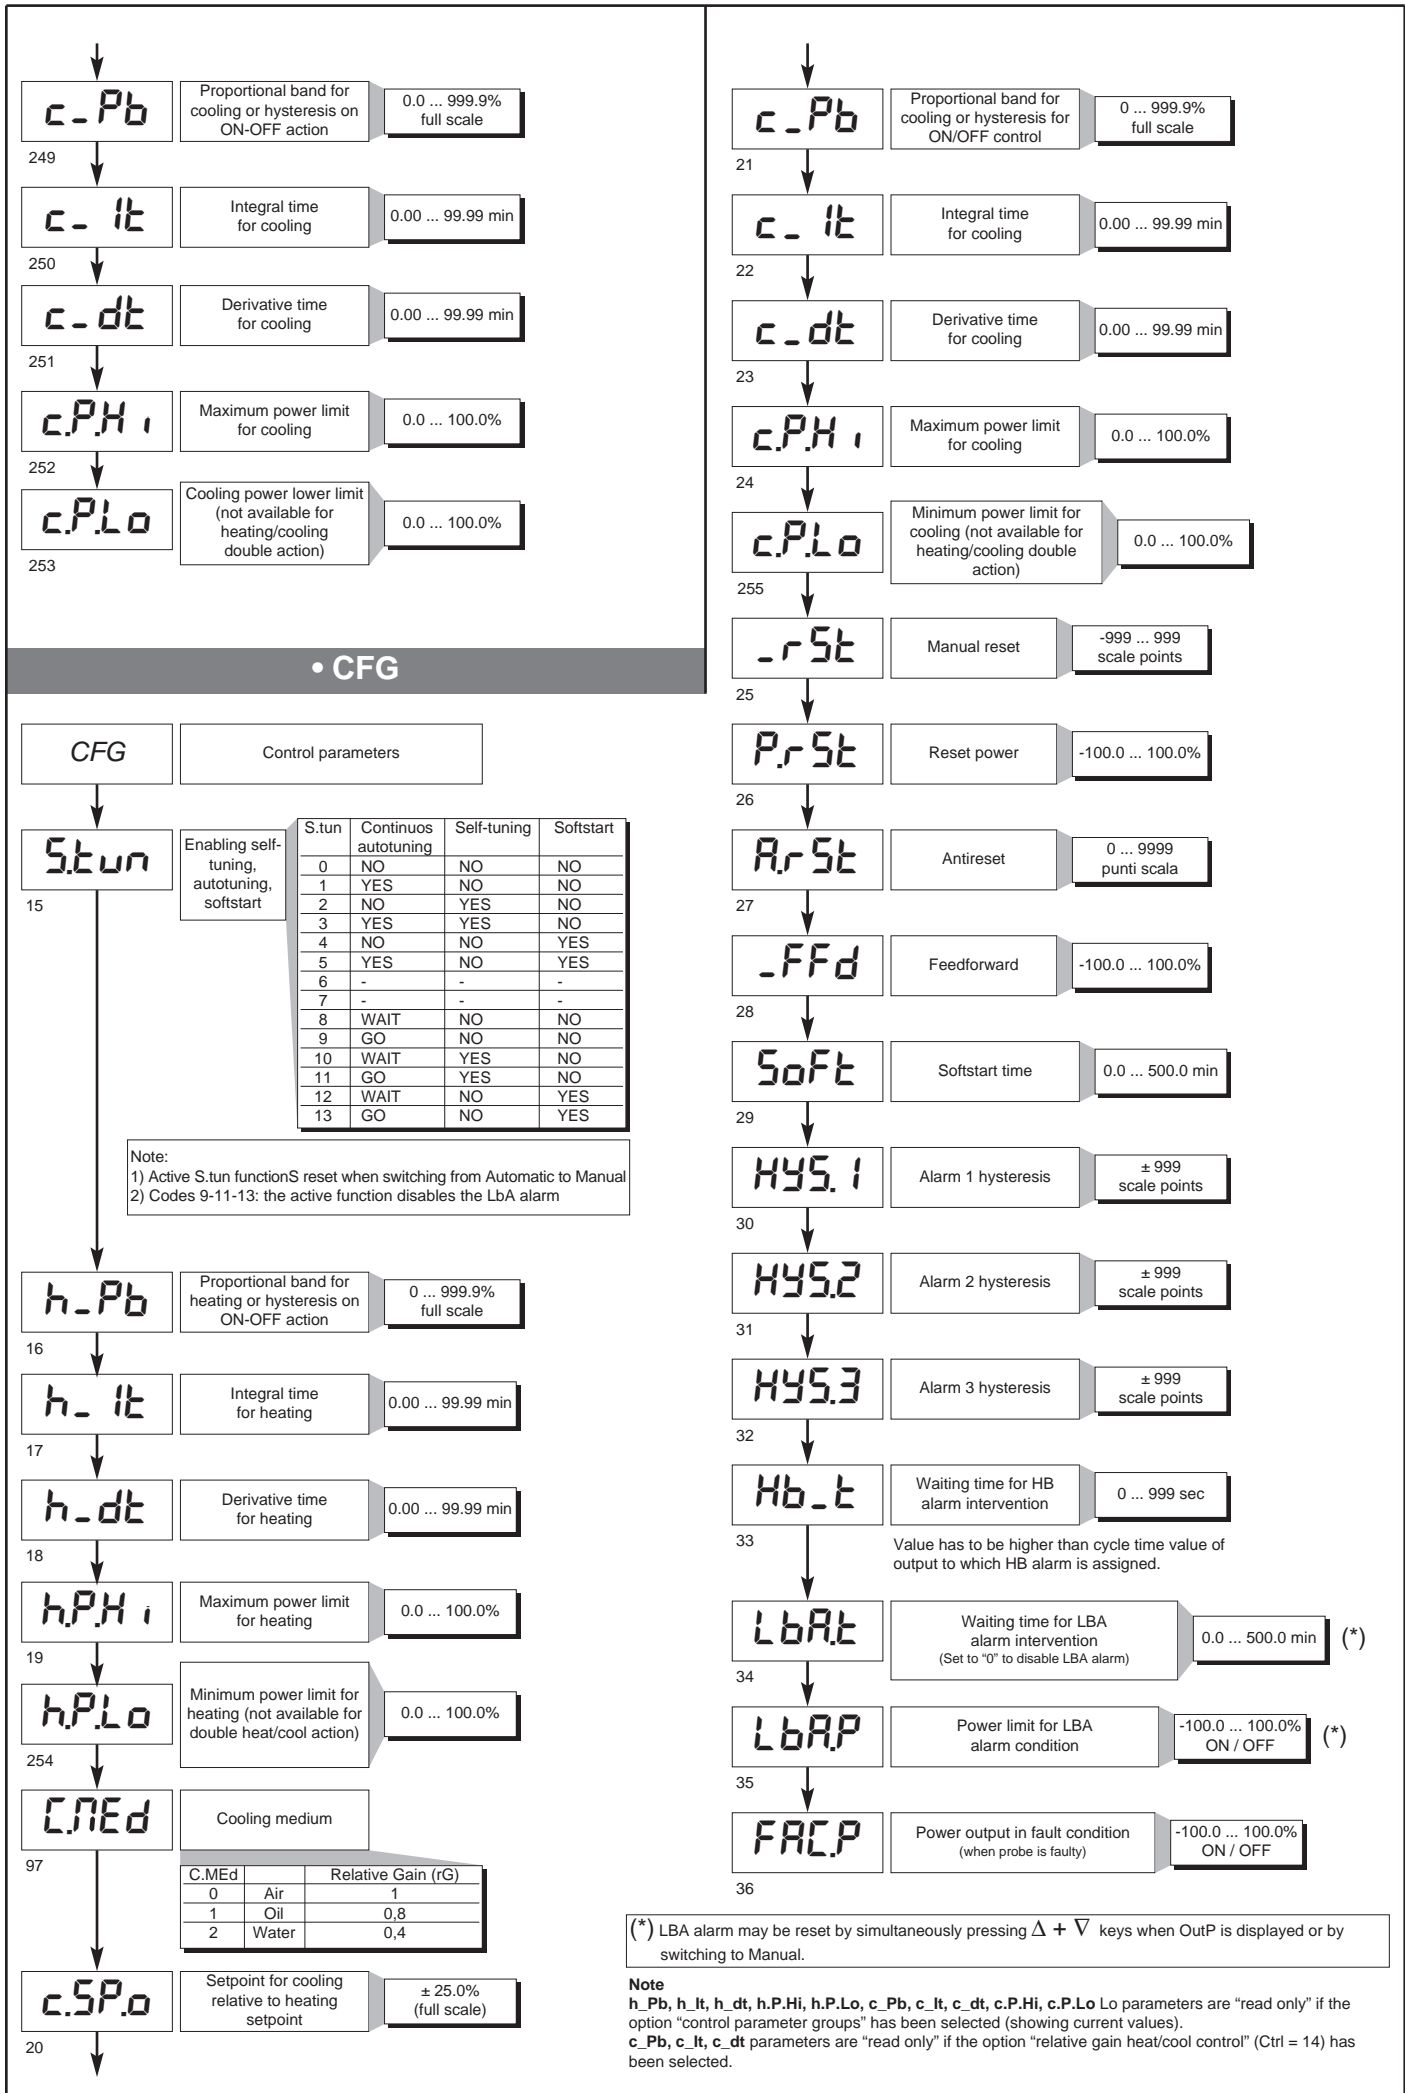



• Ser

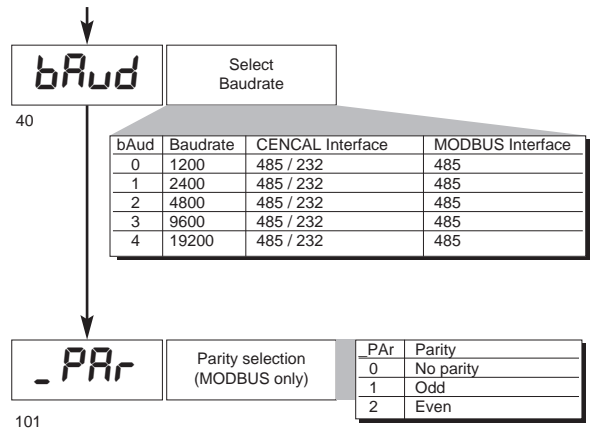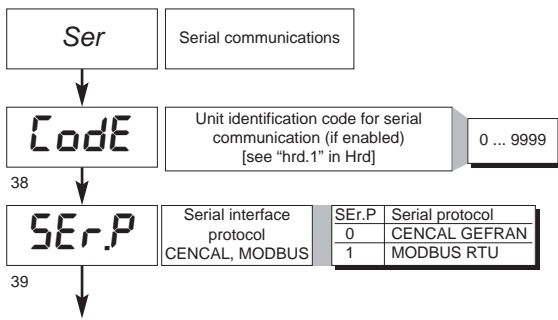

• InP

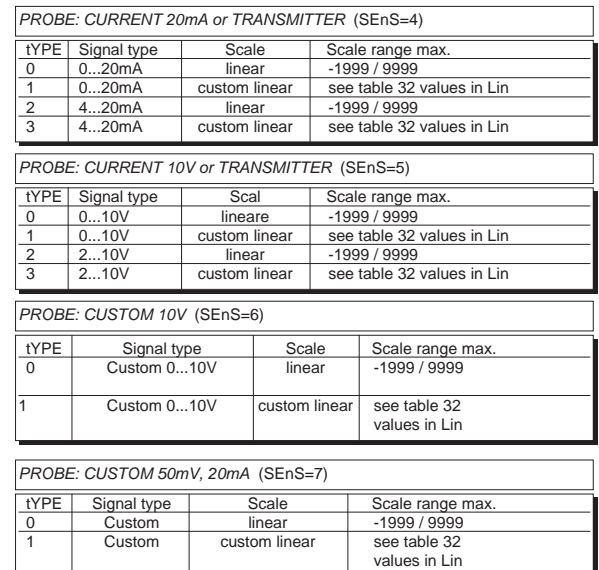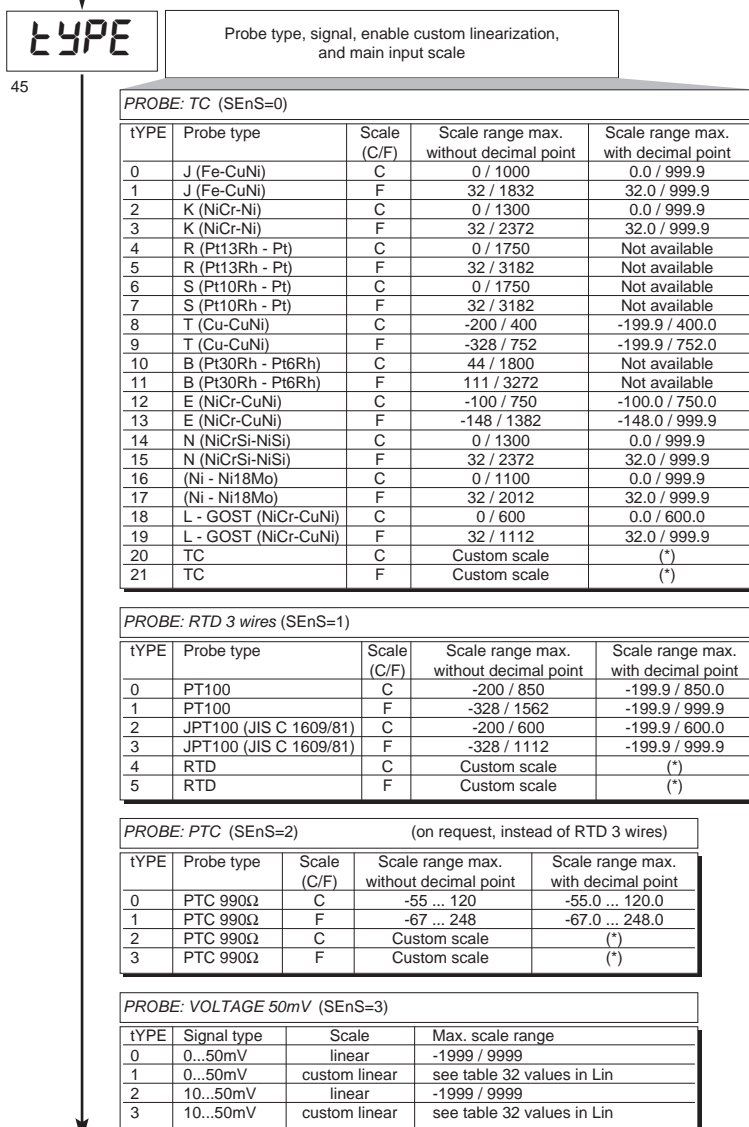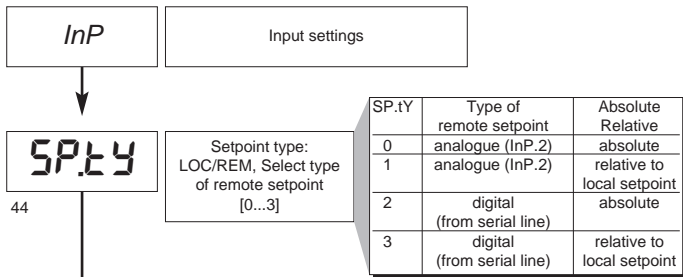

(\*) Linearization and scale limit settings (with or without decimal point) are selectable from PC via serial line

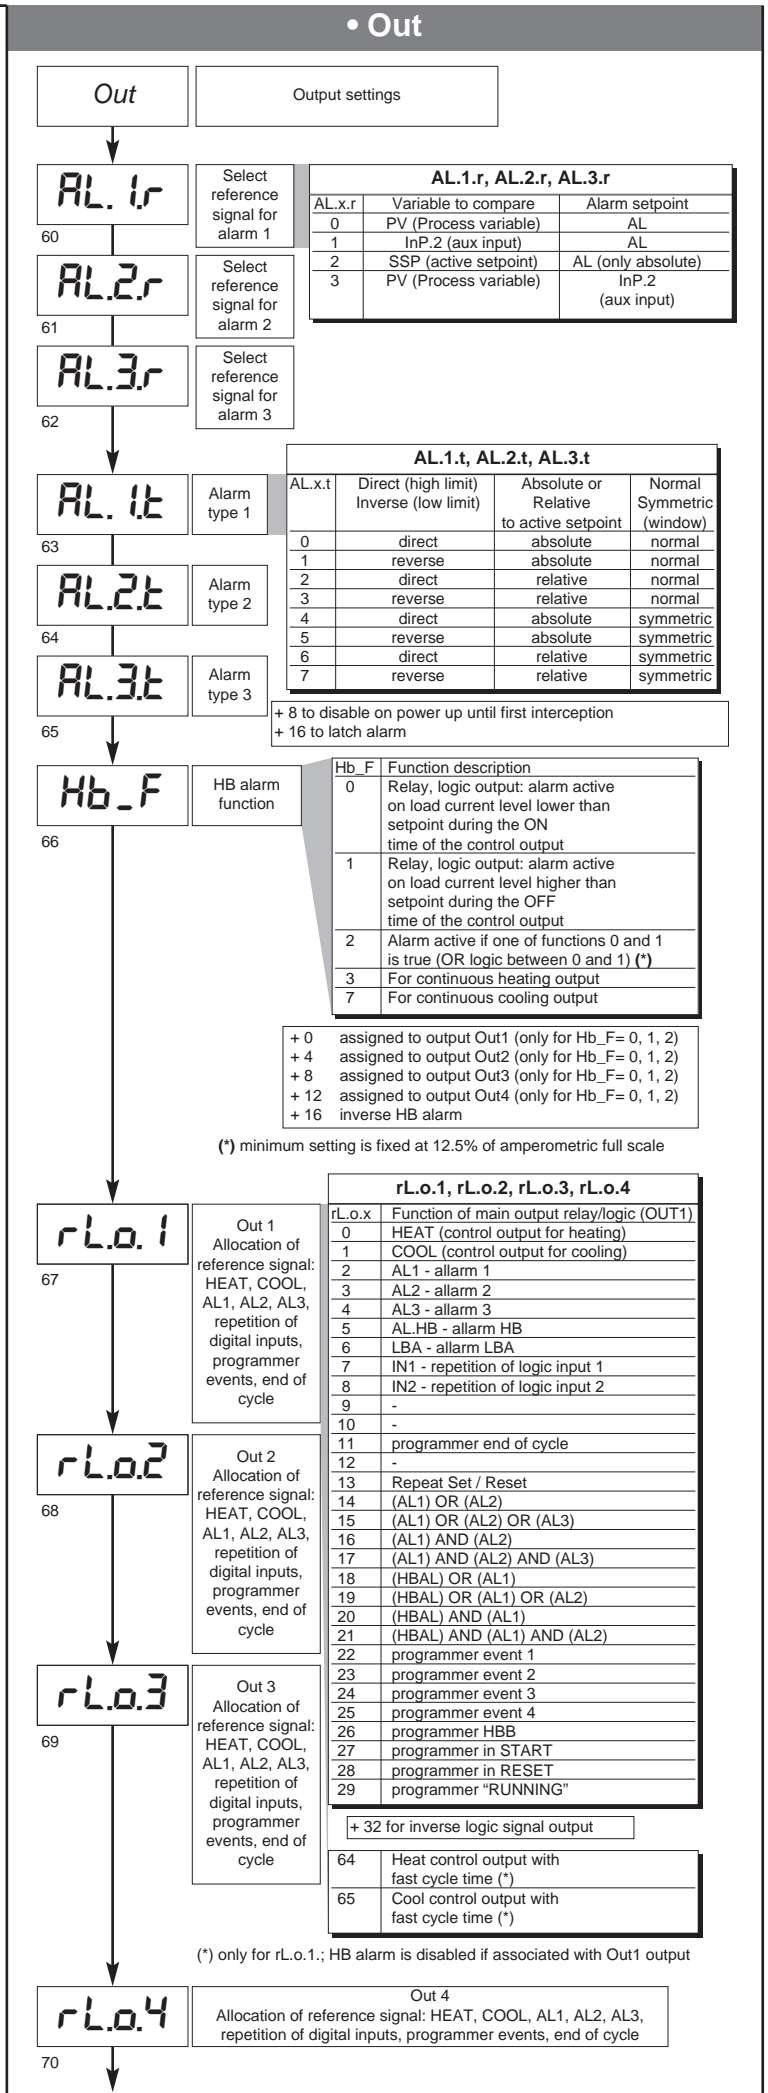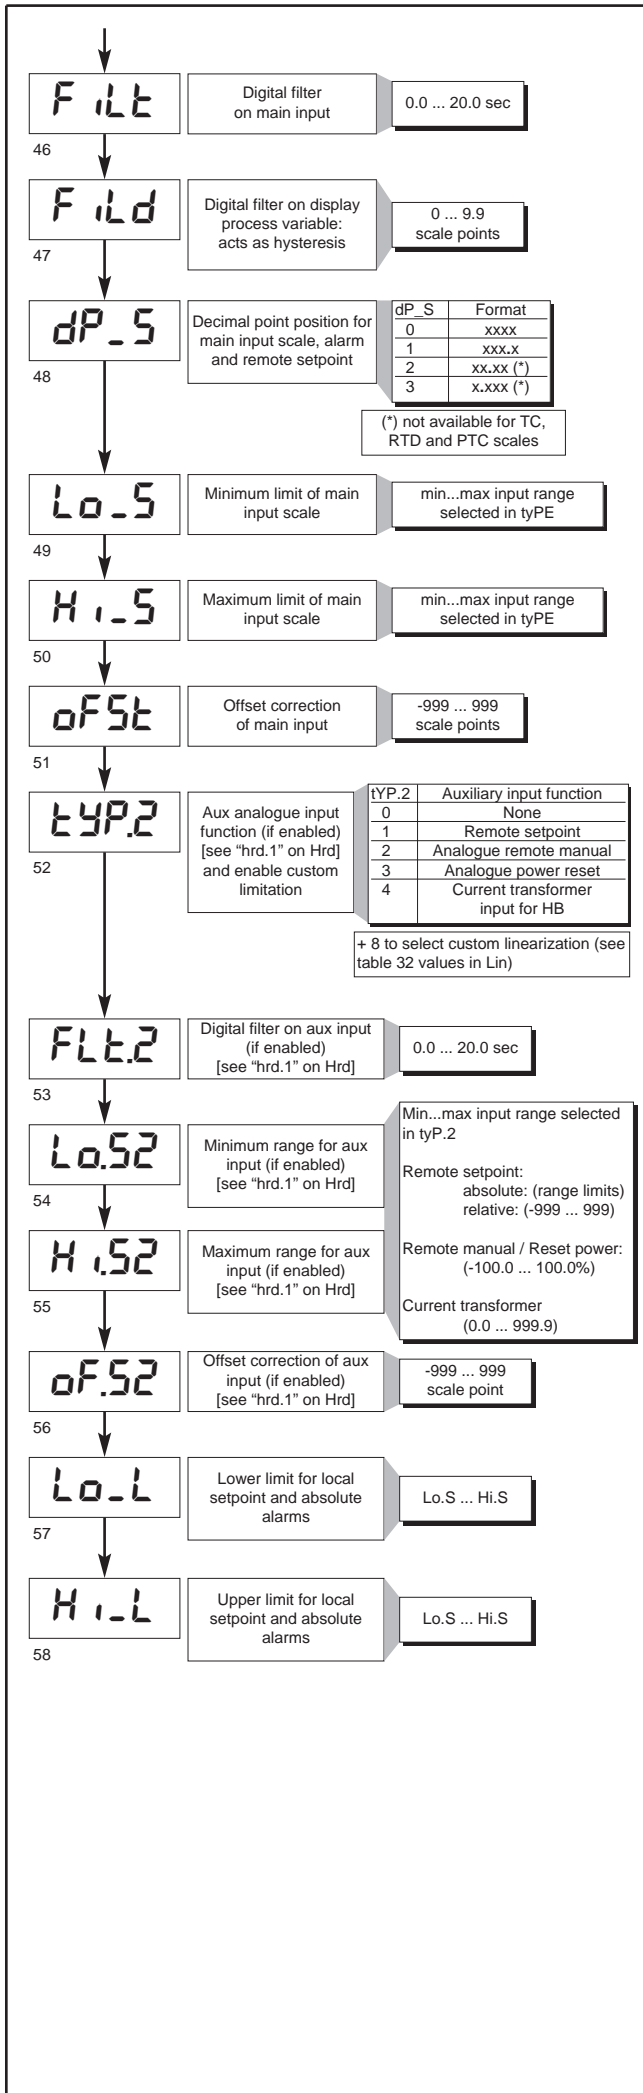

• Hrd

71 **-Ct.1** Cycle time for OUT1 relay or logic output = HEAT or COOL 1...200 sec (0.1...20.0 sec)

72 **-Ct.2** Cycle time for OUT2 relay or logic output = HEAT or COOL 1...200 sec

73 **-Ct.3** Cycle time for OUT3 relay or logic output = HEAT or COOL 1...200 sec

74 **-Ct.4** Cycle time for OUT4 relay or logic output = HEAT or COOL 1...200 sec

75 **-rEL.** Fault action (sets state in case of probe fault) Alarm outputs AL1, AL2, AL3; Select intrinsic safety

rEL.	Allarm 1	Allarm 2	Allarm 3
0	OFF	OFF	OFF
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON
5	ON	OFF	ON
6	OFF	ON	ON
7	ON	ON	ON

Note:  
1) In case of broken probe, logic state of individual alarm assumes selected logic value without consideration of alarm type (direct or inverse): ON=alarm active; OFF=alarm inactive  
2) Assign alarms to available outputs by entering codes rLo1, rLo2, rLo3, rLo4.

78 **An.o.1** Out W1 Assignment of signal or reference value: PV, SP, SP-PROG, DEV+, DEV-, IN.AUX, HEAT, COOL, AL1, AL2, AL3, serial line value

An.o.x	Reference value
0	PV - process variable
1	SSP - active setpoint
2	-
3	InP.2 - aux input
4	Deviation (SSP-PV)
5	HEAT (*)
6	COOL (*)
7	AL1 (alarm point)
8	AL2 (alarm point)
9	AL3 (alarm point)
10	AL.HB - (alarm point)
11	Value acquired from serial line
12	Setpoint slaved to programmer

+ 16 for inverted output with respect to reference value  
+ 32 for output with 2...10V, 4...20mA signal

(\*) - Fixed scale limits  
- Retransmission output not available with ON/OFF control action

76 **LAn.1** Minimum limit of analogue repetition signal output 1 -1999...9999

77 **HAn.1** Maximum limit of analogue repetition signal output 1 -1999...9999

81 **An.o.2** Out W2 Assignment of signal or reference value: PV, SP, SP-PROG, DEV+, DEV-, IN.AUX, HEAT, COOL, AL1, AL2, AL3, serial line value

79 **LAn.2** Minimum limit of analogue repetition signal output 2 -1999...9999

80 **HAn.2** Maximum limit of analogue repetition signal output 2 -1999...9999

**Hrd** Hardware configuration

**SP.Pt** Programmer installation and resource selection

SP.Pt	Type of programmer
0	Programmer disabled (with programmer disabled, operation is as described in the 1600/1800 controller manual)
1	12-step programmer without control parameters group
2 (*)	12-step programmer with control parameter groups
3 (*)	16-step programmer without control parameter groups

(\*) as alternative to the custom input linearization function

**SP.Pr** Programmer function

SP.Pr	Programmer function
1	Program selection from keypad; time base HH : MM
2	Program selection from digital inputs; time base HH : MM

+ 4 time base HH : MM  
+ 8 to enable slaved setpoint  
+ 16 to enable 4 events (ramp and/or hold)  
+ 32 to enable step advance from digital inputs  
+ 64 to enable Hold Back Band

**hrd.1** Installation of aux input, digital inputs, serial interface

hrd.1	Aux analogue input	Logic input 1 (IN1)	Logic input 2 (IN2)	Serial interface
0				
1	x			
2		x		
3	x	x		
4			x	
5	x		x	
6		x	x	
7	x	x	x	
8				x
9	x			x
10		x		x
11	x	x		x
12			x	x
13	x		x	x
14		x	x	x
15	x	x	x	x

**hrd.2** Installation of relay, logic outputs MAIN, AL1, AL2, AL3, and analogue outputs W1, W2

hrd.2	OUT1 (relé, logic)	OUT2 (relé, logic)	OUT3 (relé, logic)	OUT4 (relé, logic)
0				
1	x			
2		x		
3	x	x		
4			x	
5	x		x	
6		x	x	
7	x	x	x	
8				x
9	x			x
10		x		x
11	x	x		x
12			x	x
13	x		x	x
14		x	x	x
15	x	x	x	x

+ 16 to enable analogue output W1  
+ 32 to enable analogue output W2  
+ 64 to invert state of LEDs compared to state of output

**Hrd.3** "" key and bargraph installation

Not available in 800 series Hrd.3 = 0

**Ctrl** Control type [0...78]

Ctrl	Control type
0	P heat
1	P cool
2	P heat / cool
3	PI heat
4	PI cool
5	PI heat / cool
6	PID heat
7	PID cool
8	PID heat / cool
9	ON-OFF heat
10	ON-OFF cool
11	ON-OFF heat / cool
12	PID heat + ON-OFF cool
13	ON-OFF heat + PID cool
14	PID heat + cool with relative gain (see C.MEd parameter)

• Prot

**Prot** Protection code




Prot	Display	Modification
0	SP, InP2, alarms, OutP, INFO, DATA	SP, alarms, DATA
1	SP, InP2, alarms, OutP, INFO, DATA	SP, alarms
2	SP, InP2, alarms, OutP, INFO	SP
3	SP	

+4 to disable InP, Out  
+8 to disable CFG, Ser  
+16 to disable SW "power-up - power down"

+32 disable manual power latching  
+64 to disable manual power modification

Selection of derivative action sampling time:  
+ 0 sample 1 sec.  
+ 16 sample 2 sec.  
+ 32 sample 8 sec.  
+ 64 sample 240 msec.  
alarm is not enabled with ON/OFF type control.



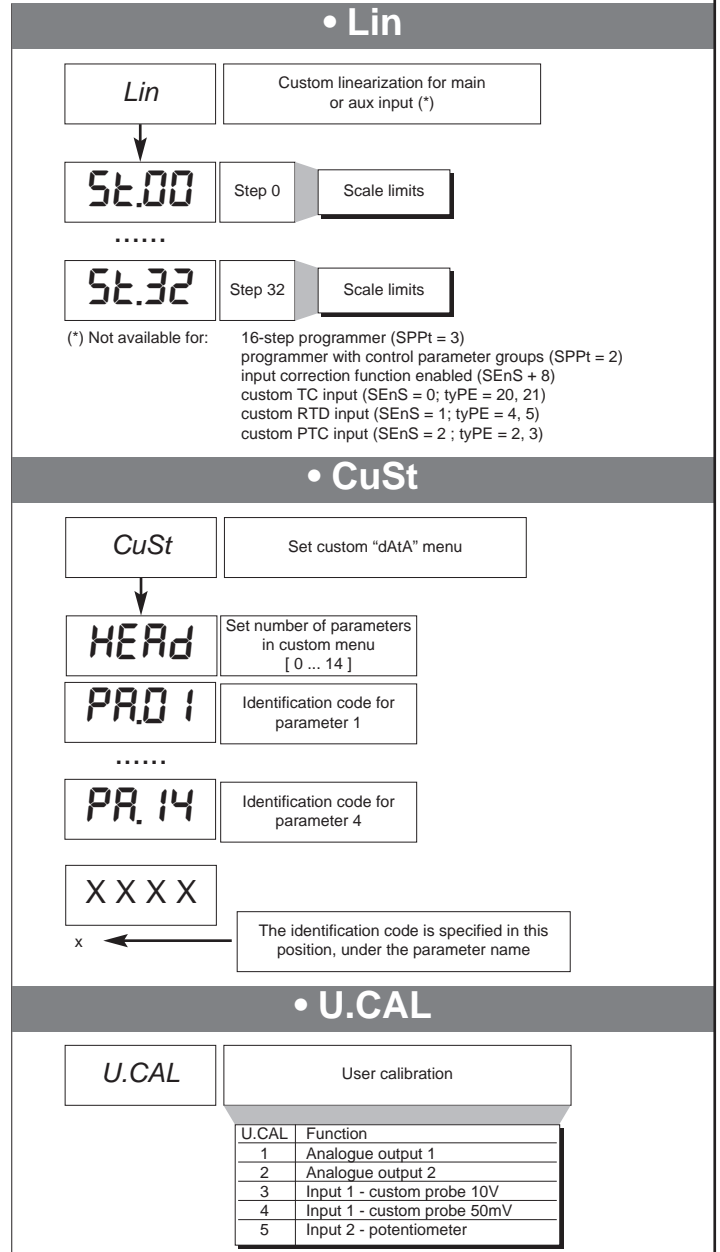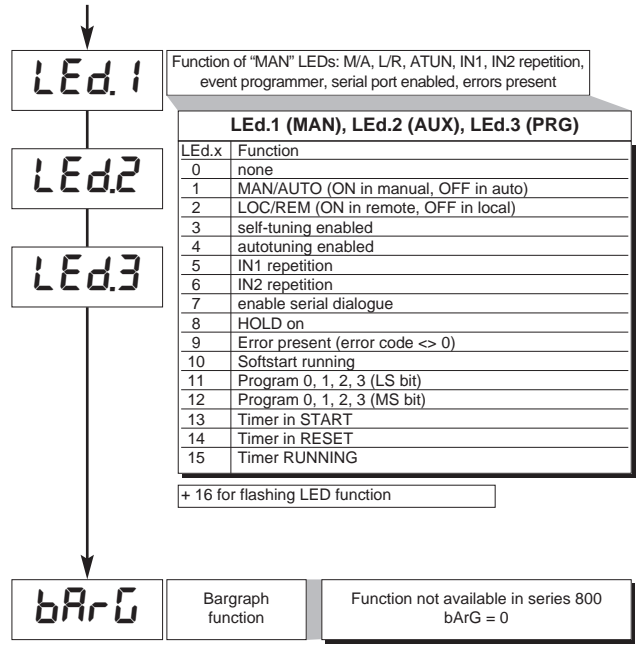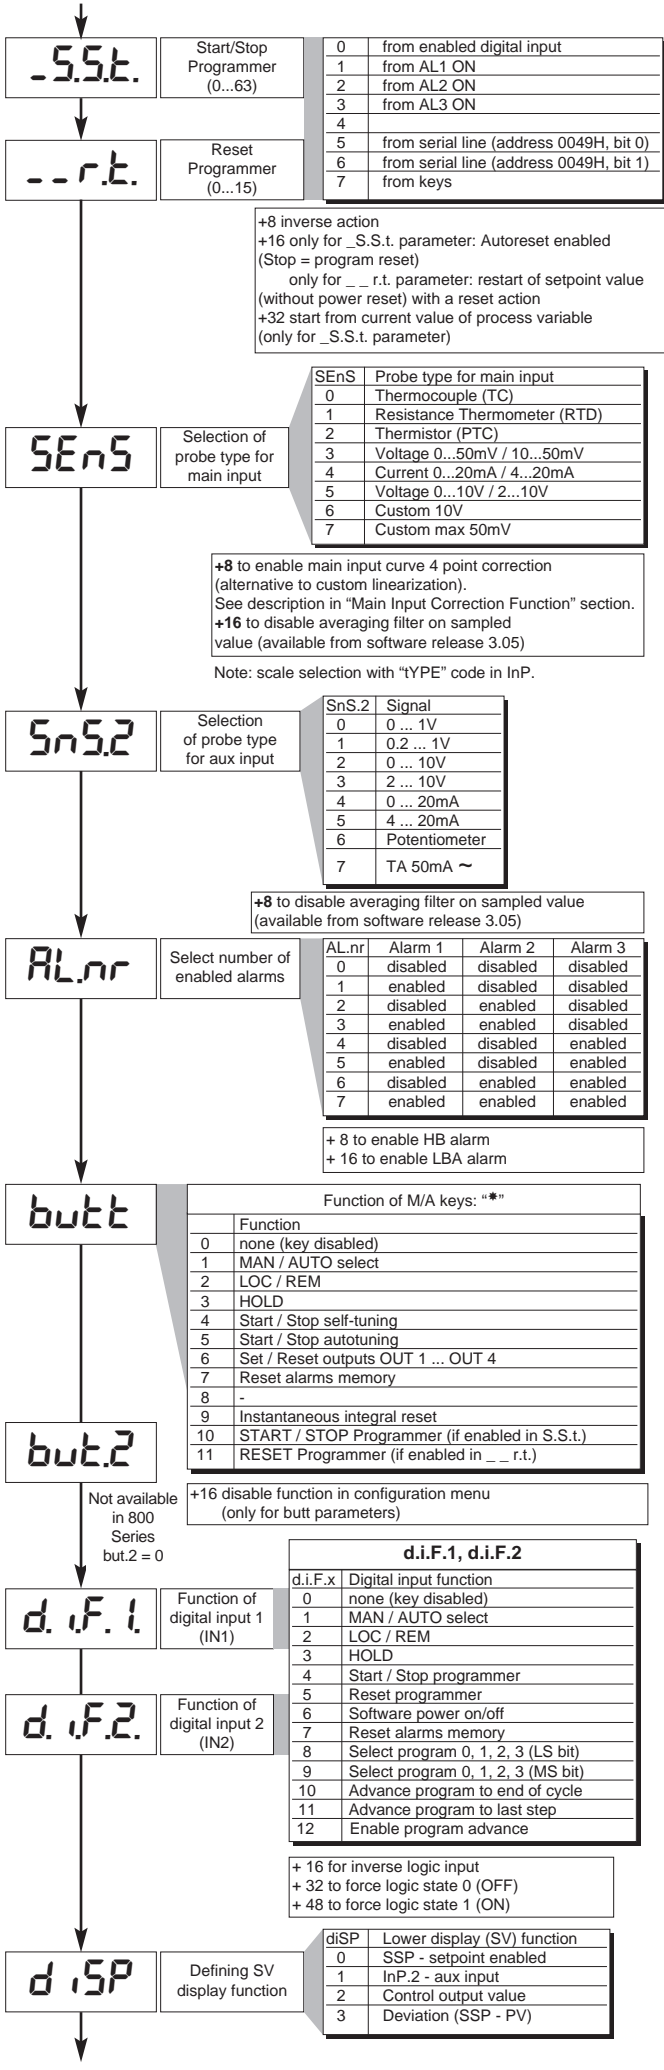

## 6 • PROGRAMMER

The unit combines the functions of a single loop controller and programmer.

The programmer function lets you run a program as a series of steps, each of which has two segments:

- √ a ramp
- √ a hold.

Every step has its associated data:

- SPs: a setpoint value
- rPt: ramp time from 0.0 to 99h59m (time base in h. m.) or 99m59s (time base in m. s.); set a time that gives a faster or slower variation depending on the initial value and on the final setpoint.
- Sot: hold time from 0.0 to 99h59m (time base in h. m.) or 99m59s (time base in m. s.).
- Hbb: tolerance band, symmetrically positioned above and below the setpoint, and referenced to the main input or the auxiliary input.
- Eur: outputs 1...4; combination codes for outputs (0-15) programmable for the ramp phase.
- EuS: outputs 1...4; combination codes for outputs (0-15) programmable for the hold phase.
- iPt: active inputs (ON) as clearance for execution.
- SLS: slave setpoint to transmit to a slave controller with the same time base.
- GrP: parameter groups to control and limit power (up to 4), selectable by single segment.

There are 12 (16\*) program steps available that can make up a maximum of 4 programs.


Examples of arrangements:

2 program of 8 and 4 steps; 4 programs of 3 steps; 2 programs of 6 steps; etc...


It is important to remember that the parameter Sty defines enabling of Hbb (on the ramp, in hold, or both) and the reference value (PV or aux input).

(\*) Alternative to custom linearization function (see parameter SP.Pr, Hrd menu).

Program example

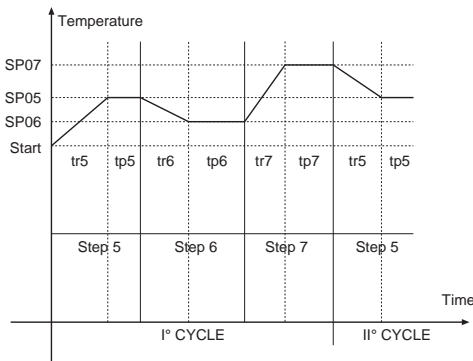

Function Hbb example (holding band)

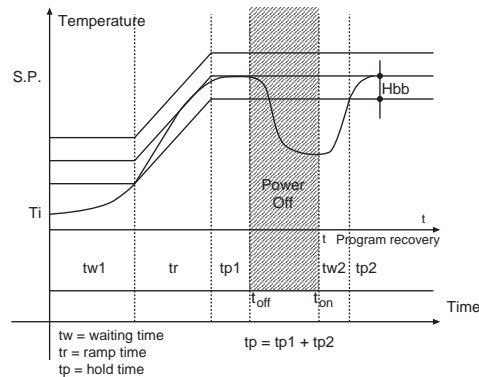

## 7 • USING THE PROGRAMMER

There are up to 12 (16\*) steps arrangeable in 4 programs. A program step contains the ramp and the hold time.

Ramp times and hold times are programmable with a time base selected as 99h59m or 99m59s.

Time base accuracy is greater than 4 secs every 10 hours.

**Program selection** from faceplate, digital input or serial line.

**Program control** from keys, digital inputs (START/STOP, RESET, end of program), serial line or events AL1/AL2/AL3.

**Program stopping and restarting modes:**

- from digital input; from "Raise" (START) key, "Lower" (STOP) key or "M/A" (RESET) key in absence of other enableings
- from state of alarms (ON = START)
- different modes of restarting after a power failure
- from setpoint prior to power failure
- from value of process variable at power-up
- with search for best setpoint forward/backward in time
- awaiting a start

**In the STOP phase, it is possible to change:**

- current setpoint
- current step time
- program number
- step number
- phase or segment (ramp or hold)

**The clearance input and event outputs** assigned to an individual step. Programmed input conditions are scanned at the beginning of every step. If satisfied, execution begins with updating of assigned outputs and restart of time base.

**Indication of end of program**, with or without forcing of control output.

Setting a tolerance band for setpoint: if the process variable is outside the band, the time base stops (Hbb - Hold back band alarm).

**Secondary setpoint** with the same time base to manage a slave controller using retransmission output W1 or W2.

Full functional modularity, with easy exclusion of functions not needed.

Up to 4 parameter groups to control and limit power, selectable by single segment (ramp and/or hold) (\*).

(\*) Alternative to custom linearization of inputs (see parameter SP.Pr, Hrd menu).

## Programmer functions

Variation of the local setpoint when the program is stopped will restart the current step, keeping the same ramp time.

If the unit is switched off and then switched on, the program can continue or can start again at the first step. Or it can search for the step that has the setpoint closest to the PV (see Pty parameter in ProG configuration to define restart conditions).


STOP/START switching at end of program resets and restarts the program.

**Fast simulation of program:**


A selected program can easily be checked by running it in **fast simulation** mode.




## 9 • ALARMS

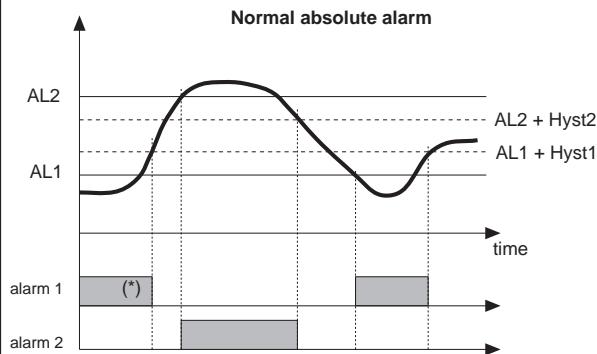


For AL1 = reverse absolute alarm (low) with positive Hyst1, AL1 t = 1  
 (\*) = OFF if disabled on power-up  
 For AL2 = direct absolute alarm (high) with negative Hyst2, AL2 t = 0

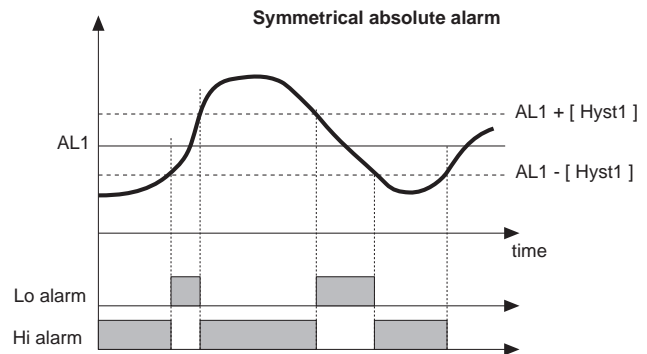

For AL1 = symmetrical Lo absolute alarm with Hyst1, AL1 t = 5  
 For AL1 = symmetrical Hi absolute alarm with Hyst1, AL1 t = 4

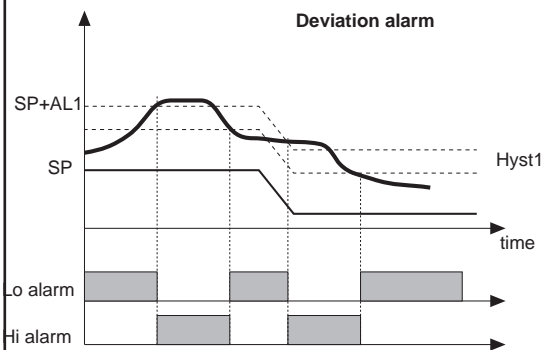

For AL1 = Lo deviation alarm with negative Hyst 1, AL1 t = 3  
 For AL1 = Hi deviation alarm with negative Hyst 1, AL1 t = 2

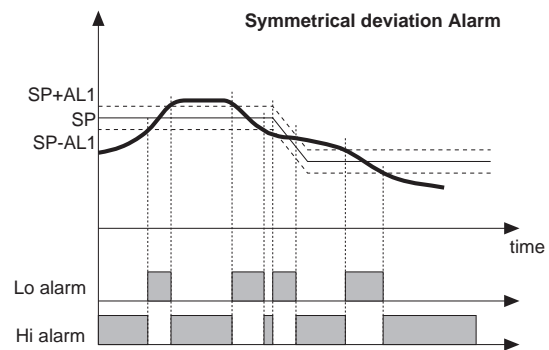

For AL1 = Symmetrical Lo deviation alarm with Hyst 1, AL1 t = 7  
 For AL1 = Symmetrical Hi deviation alarm with Hyst 1, AL1 t = 6

## ALARM HB

This type of alarm requires use of a current transformer input (CT).

It can indicate variations of load current measured through transformer input in the range (Lo.S2 ... HI.S2).

It is enabled by means of configuration code (Hrd, AL.nr); in this case the alarm setpoint is expressed as HB scale points.

The alarm function and the assigned control output are selected through parameter Hb\_F ("Out" phase).

The alarm setpoint is AL.Hb.

The direct HB alarm trips if current transformer input falls below the setpoint for Hb\_t seconds of ON time for the selected output.

The HB alarm can be activated only with ON times exceeding 0.4 seconds.

The HB alarm monitors load current even during the OFF period of the cycle time of the selected output.

The HB alarm will trip if measured current exceeds 12% of the CT input full scale for Hb\_t seconds when the output is in OFF state.

The alarm is reset automatically when alarm conditions have been cleared.

If AL.Hb is set at = 0, both types of HB alarm are disabled and the assigned relay is de-energized.

The load current reading is displayed by selecting InP2 (level 1).

NOTE: ON/OFF times refer to the cycle time set for the selected output.

Alarm Hb\_F = 3 (7), for analog output is ON when the load current is lower than the alarm setpoint; the alarm is disabled if the heating (cooling) output is lower than 2%.

## ALARM LBA

This alarm detects an interruption in the control loop caused by a possible short-circuited probe, inverted probe connections or broken load.

If enabled (AL.nr), the alarm trips if the variable does not increase when heating (reduce when cooling) at maximum power for a set time (LbA.t).

The value of the variable is enabled only outside the proportional band; when the alarm is ON, power is limited to value (LbA.P).

The alarm condition resets as soon as temperature increases for heating (or reduces for cooling), or by simultaneously pressing the "∇" e "Δ" keys in Out.P of level 1.

The LBA function is disabled if LbA.t = 0.

## 10 • SOFT-START

This function (if enabled) partializes power in proportion to the time elapsed since power-up compared to the preset time 0.0 ... 500.0 min ("SoFt" parameter, CFG). Soft-start is an alternative to self-tuning and is activated each time the unit is powered up. The soft-start function is reset by switching to Manual control.

## 11 • CONTROL ACTIONS

### *Proportional Action:*

action in which contribution to output is proportional to deviation at input (deviation = difference between controlled variable and setpoint).

### *Derivative Action:*

action in which contribution to output is proportional to rate of variation input deviation.

### *Integral Action:*


action in which contribution to output is proportional to integral of time of input deviation.

### **Influence of Proportional, Derivative and Integral actions on response of process under control**

- An increase in P.B. reduces oscillations but increases deviation.
  - A reduction in P.B. reduces the deviation but provokes oscillations of the controlled variable (the system tends to be unstable if P.B. value is too low).
  - An increase in Derivative Action corresponds to an increase in Derivative Time, reduces deviation and prevents oscillation up to a critical value of Derivative Time, beyond which deviation increases and prolonged oscillations occur.
  - An increase in Integral Action corresponds to a reduction in Integral Time, and tends to eliminate deviation between the controlled variable and the setpoint when the system is running at rated speed.
- If the Integral Time value is too long (Weak integral action), deviation between the controlled variable and the setpoint may persist.  
Contact GEFTRAN for more information on control actions.

## 12 • MANUAL TUNING

- A) Enter the setpoint at its working value.  
B) Set the proportional band at 0.1% (with on-off type setting).  
C) Switch to automatic and observe the behavior of the variable. It will be similar to that in the figure:

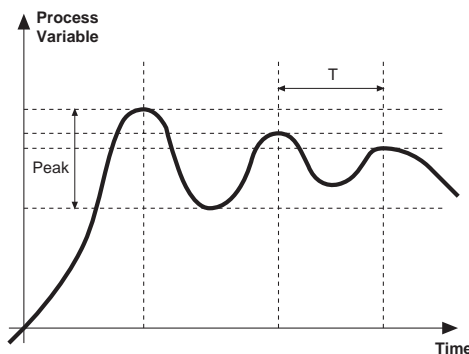

- D) The PID parameters are calculated as follows: Proportional band

$$\text{P.B.} = \frac{\text{Peak}}{V \text{ max} - V \text{ min}} \times 100$$

(V max - V min) is the scale range.

Integral time:  $I_t = 1.5 \times T$

Derivative time:  $d_t = I_t/4$

- E) Switch the unit to manual, set the calculated parameters. Return to PID action by setting the appropriate relay output cycle time, and switch back to Automatic.  
F) If possible, to optimize parameters, change the setpoint and check temporary response. If an oscillation persists, increase the proportional band. If the response is too slow, reduce it.

## 13 • SOFTWARE ON / OFF SWITCHING FUNCTION

**How to switch the unit OFF:** hold down the "F" and "Raise" keys simultaneously for 5 seconds to deactivate the unit, which will go to the OFF state while keeping the line supply connected and keeping the process value displayed. The SV display is OFF.

All outputs (alarms and controls) are OFF (logic level 0, relays de-energized) and all unit functions are disabled except the switch-on function and digital communication.

**How to switch the unit ON:** hold down the "F" key for 5 seconds and the unit will switch OFF to ON. If there is a power failure during the OFF state, the unit will remain in OFF state at the next power-up (ON/OFF state is memorized).

The function is normally enabled, but can be disabled by setting the parameter Prot = Prot +16. This function can be assigned to a digital input (d.i.F.1 or d.i.F.2) and excludes deactivation from the keyboard.

## 14 • SELF-TUNING

The function works for single output systems (heating or cooling).

The self-tuning action calculates optimum control parameter values during process startup.

The variable (for example, temperature) must be that assumed at zero power (room temperature).

The controller supplies maximum power until an intermediate value between starting value and setpoint is reached, after which it zeros power.

PID parameters are calculated by measuring overshoot and the time needed to reach peak. When calculations are finished, the system disables automatically and the control proceeds until the setpoint is reached.

### How to activate self-tuning:

A. Activation at switch-on


1. Switch program to STOP
2. Adjust setpoint to required value
3. Enable self-tuning by setting **Stun** parameter to 2 (CFG menu)
4. Switch unit off
5. Make sure that temperature is approximately room temperature
6. Switch the unit on

B. Activation from keyboard

1. Make sure that M/A key is enabled for Start/Stop self-tuning function

(**butt** code = 4 Hrd menu)

2. Switch program to STOP
3. Adjust temperature to approximately room temperature
4. Adjust setpoint to required value
5. Press M/A key to activate self-tuning (Attention: self-tuning will be disabled if the key is pressed again).

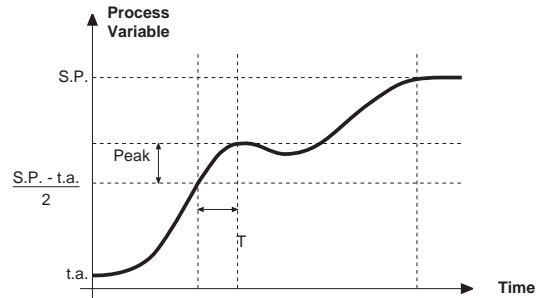

The procedure runs automatically until finished, when the new PID parameters are stored: proportional band, integral and derivative times calculated for the active action (heating or cooling). In case of double action (heating or cooling), parameters for the opposite action are calculated by maintaining the initial ratio between parameters (ex.:  $CPb = HPb * K$ ; where  $K = CPb / HPb$  when self-tuning starts). When finished, the **Stun** code is automatically cancelled.

Notes:

- The procedure interrupts when the setpoint value is exceeded. In this case, the **Stun** code is not cancelled.
- It is good practice to enable one of the configurable LEDs to signal self-tuning status. By setting one of LED1, LED2, LED3 = 3 (or 19) on the Hrd menu, the corresponding LED will be on (or flashing) when self-tuning is active.
- For the programmer model, the program is in STOP if self-tuning is activated when the unit is switched on.

## 15 • AUTO-TUNING

PID parameters cannot be set if the auto-tuning function is enabled.

The function can be one of two types: permanent or one-shot.

The first continuously measures system oscillations to find the optimum PID values to reduce such oscillations.

It does not engage if the oscillations drop below 1.0% of the proportional band.


It is interrupted if the setpoint is changed, and is automatically resumed when the setpoint stabilizes.

The calculated parameters are not stored.

If the unit is switched off, the controller reverts to the values set before auto-tuning was enabled.


One-shot auto-tuning is useful for calculating values around a setpoint. It produces a variation of 10% of current power at the output and examines the effect of the overshoot over time. These parameters are stored and replace those previously set. After this disturbance, the controller resumes control at the setpoint using the new parameters. The parameter activated in CFG is accepted only if the control power is between 20 and 80%.

## 16 • CONTROL OUTPUT

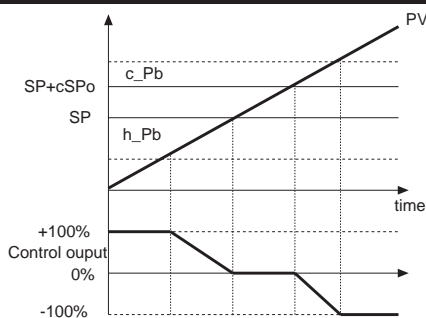

Control output with proportional action only if proportional heating band is separated from proportional cooling band.

PV = Process Value  
 SP+cSPo = Cooling Setpoint  
 c\_Pb = Proportional cooling band

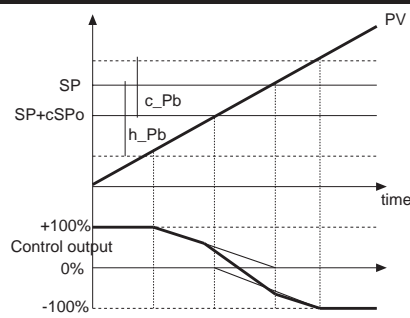

Control output with proportional action only if proportional heating band overlaps proportional cooling band

SP = Heating Setpoint  
 h\_Pb = Proportional heating band

## Heating/Cooling control with relative gain

In this control mode (enabled with CtrlL = 14 parameter) the type of cooling has to be specified.

Cooling PID parameters are therefore calculated based on heating parameters according to the specified ratio.

(for example: c.MEd = 1 (oil), H\_Pb = 10, H\_dt = 1, H\_lt = 4 implies: C\_Pb = 12,5, C\_dt = 1, C\_lt = 4)

We advise you to apply the following values when setting output cycle times:

Air T Cool Cycle = 10 sec.

Oil T Cool Cycle = 4 sec.

Water T Cool Cycle = 2 sec.

NB.: Cooling parameters **cannot be modified** in this mode.

## 17 • MAIN INPUT CORRECTION FUNCTION

Lets you custom correct reading of the main input by setting four values: A1, B1, A2, B2.

This function is enabled by setting "Sens" +8 code ("Hrd" menu).

Example: Sens = 1+8 = 9 for RTD probe with input correction.

The scale can be reversed if this function is applied to linear scales (50mv, 10V, 20mA, Pot).

The four values are set on the "Lin" menu as follows: A1 = St100, B1 = St01, A2 = St02, B2 = St03. Setting is limited to the defined scale ("LoS" ... "HiS" on "InP" menu).

The offset function ("oFt" parameter on "InP" menu) remains enabled.

Limits:

B1 always greater than A1;

B1-A1 at least 25% of full scale of selected probe.


Example:

Sens = 9, TyPE = 0 (Pt100 natural scale -200...+600), dPS = 0

LoS = 0, HiS = 400, oFt = 0


Reference point on real curve: A1 = St00 = 50, B1 = St01 = 350 (B1-A1 = 300, greater than 25% of 800)

Corresponding points on corrected curve: A2 = St02 = 120, B2 = St03 = 220

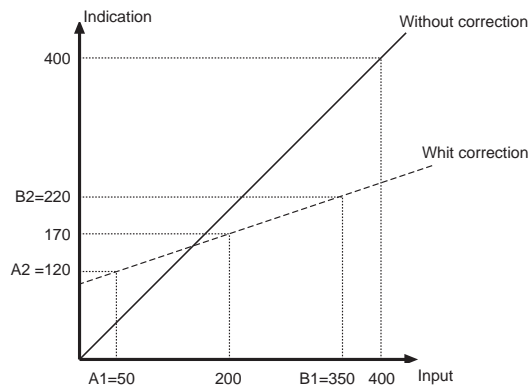

## 18 • ACCESSORIES

### • CURRENT TRANSFORMERS

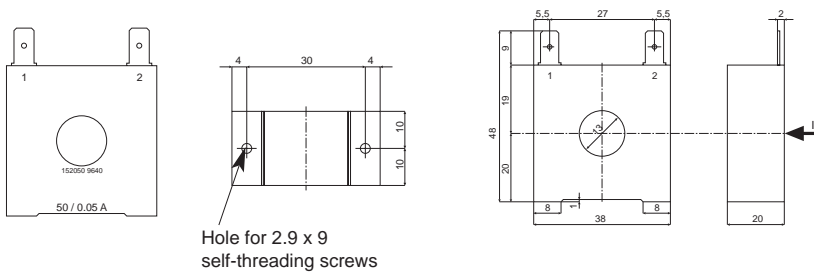


These transformers are used to measure currents of 50 ÷ 60Hz from 25A to 600A (nominal primary current). The peculiar characteristic of these transformers is the high number of secondary turns. This provides a very low secondary current, suitable for an electronic measurement circuit. The secondary current may be detected as voltage on a resistor.

### • ORDER CODE

CODE	Ip / Is	Ø Secondary Wire	n	OUTPUTS	Ru	Vu	ACCURACY
TA/152 025	25 / 0.05A	0.16 mm	n <sub>1:2</sub> = 500	1 - 2	40 Ω	2 Vac	2.0 %
TA/152 050	50 / 0.05A	0.18 mm	n <sub>1:2</sub> = 1000	1 - 2	80 Ω	4 Vac	1.0 %

COD. 330200	IN = 50Aac OUT = 50mAac
COD. 330201	IN = 25Aac OUT = 50mAac

### • RS232 interface for instrument configuration

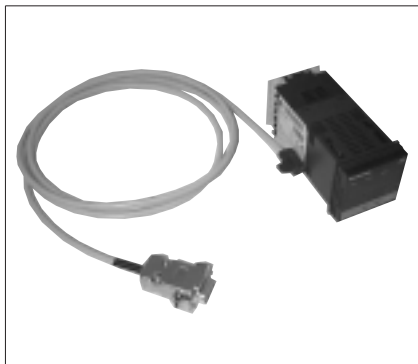

**N.B.:** RS232 interface for PC configuration is supplied with configuration software.

The digital communication connection must be executed with unit ON and inputs/outputs not connected.

### • ORDER CODE

WSK-0-0-0	Interface cable + CD Winstrum
-----------	-------------------------------

## ORDER CODE

800P

OUTPUT 1 (MAIN)	
Relé	R
D2 static	D*
OUTPUT 2 (AL1)	
Relé	R
D2 static	D*
OUTPUT 3 (AL2)	
None	0*
Relé	R
D2 static	D
OUTPUT 4 (AL3)	
None	0*
Relé	R
0...10V analogue	V
0...20, 4...20mA analogue	I

POWER SUPPLY	
0	20...27Vac/Vdc ±10%
1*	100...240Vac/Vdc ±10%

DIGITAL COMMUNICATIONS	
0*	None
2	RS 485 / RS 232C

AUXILIARY INPUTS	
0*	None
1	0...1V
2	0...10V / Potentiometer #
3	0...20, 4...20mA
5	CT 50mAac

OUTPUT 5 - DIGITAL INPUTS IN1, IN2 - TRANSMITTER SUPPLY	
00*	None
01	Output 5 analogue (W2) 0...10V
02	Output 5 analogue (W2) 0...20, 4...20mA
03	IN1, IN2 NPN; 10V transmitter supply 10V/24V
04	IN1, IN2 PNP; 10V transmitter supply 10V/24V
05	IIN1 NPN; 10V transmitter supply 10V/24V; Output 5 analogue (W2) 0...10V
06	IN1 PNP; 10V transmitter supply 10V/24V; Output 5 analogue (W2) 0...10V
07	IN1 NPN; 10V transmitter supply 10V/24V; Output 5 analogue (W2) 0...20, 4...20Ma
08	IN1 PNP; 10V transmitter supply 10V/24V; Output 5 analogue (W2) 0...20, 4...20mA

(\*) Indicates standard version

# Potentiometer input requires 10V supply

Note:

Digital input 2 is alternative to analogue output 2  
Analogue output 2 is alternative to digital input 2

Make specific calibration request for PTC input.

Please, contact GEFRAN sales people for the codes availability.

## • WARNINGS



**WARNING:** this symbol indicates danger.

It is placed near the power supply circuit and near high-voltage relay contacts.

### Read the following warnings before installing, connecting or using the device:

- follow instructions precisely when connecting the device.
- always use cables that are suitable for the voltage and current levels indicated in the technical specifications.
- the device has no ON/OFF switch: it switches on immediately when power is turned on. For safety reasons, devices permanently connected to the power supply require a two-phase disconnecting switch with proper marking. Such switch must be located near the device and must be easily reachable by the user. A single switch can control several units.
- if the device is connected to electrically NON-ISOLATED equipment (e.g. thermocouples), a grounding wire must be applied to assure that this connection is not made directly through the machine structure.
- if the device is used in applications where there is risk of injury to persons and/or damage to machines or materials, it MUST be used with auxiliary alarm units. You should be able to check the correct operation of such units during normal operation of the device.
- before using the device, the user must check that all device parameters are correctly set in order to avoid injury to persons and/or damage to property.
- the device must NOT be used in inflammable or explosive environments. It may be connected to units operating in such environments only by means of suitable interfaces in conformity to local safety regulations.
- the device contains components that are sensitive to static electrical discharges. Therefore, take appropriate precautions when handling electronic circuit boards in order to prevent permanent damage to these components.

**Installation:** installation category II, pollution level 2, double isolation

- power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.
- install the instrumentation separately from the relays and power switching devices
- do not install high-power remote switches, contactors, relays, thyristor power units (particularly if "phase angle" type), motors, etc... in the same cabinet.
- avoid dust, humidity, corrosive gases and heat sources.
- do not close the ventilation holes; working temperature must be in the range of 0...50°C.

If the device has faston terminals, they must be protected and isolated; if the device has screw terminals, wires should be attached at least in pairs.

• **Power:** supplied from a disconnecting switch with fuse for the device section; path of wires from switch to devices should be as straight as possible; the same supply should not be used to power relays, contactors, solenoid valves, etc.; if the voltage waveform is strongly distorted by thyristor switching units or by electric motors, it is recommended that an isolation transformer be used only for the devices, connecting the screen to ground; it is important for the electrical system to have a good ground connection; voltage between neutral and ground must not exceed 1V and resistance must be less than 60hm; if the supply voltage is highly variable, use a voltage stabilizer for the device; use line filters in the vicinity of high frequency generators or arc welders; power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.

• **Input and output connections:** external connected circuits must have double insulation; to connect analog inputs (TC, RTD) you have to: physically separate input wiring from power supply wiring, from output wiring, and from power connections; use twisted and screened cables, with screen connected to ground at only one point; to connect adjustment and alarm outputs (contactors, solenoid valves, motors, fans, etc.), install RC groups (resistor and capacitor in series) in parallel with inductive loads that work in AC (Note: all capacitors must conform to VDE standards (class x2) and support at least 220 VAC. Resistors must be at least 2W); fit a 1N4007 diode in parallel with the coil of inductive loads that operate in DC.


**GEFRAN spa will not be held liable for any injury to persons and/or damage to property deriving from tampering, from any incorrect or erroneous use, or from any use not conforming to the device specifications.**



**PONTICELLI PER CONFIGURAZIONE**  
**JUMPERS FOR CONFIGURATION**  
**BRÜCKEN FÜR KONFIGURATION**

**PONTS ÉTAIN POUR CONFIGURATION**  
**PUNTES PARA CONFIGURACIÓN**  
**PONTES PARA CONFIGURAÇÃO**

Struttura dello strumento: identificazione schede  
 Device structure: identification of boards  
 Aufbau des Instruments: Leiterplatten  
 Structure de l'appareil: identification des cartes  
 Estructura del instrumento: identificación fichas  
 Estrutura do instrumento: identificação das placas

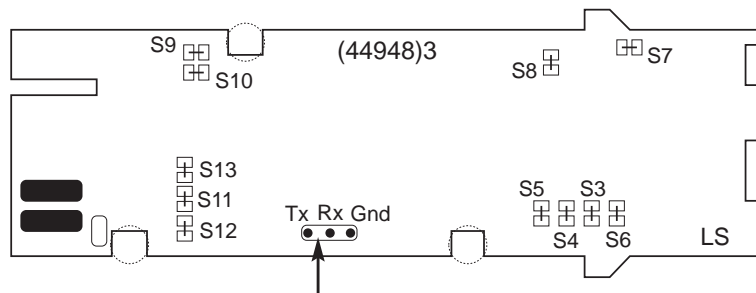


SCHEDA CPU  
 CPU BOARD  
 CPU-KARTE  
 CARTE CPU  
 FICHA CPU  
 PLACA CPU

Connettore per collegamento seriale  
 Connector for serial connection  
 Steckverbinder für seriellen Anschluss  
 Connecteur pour raccordement série  
 Conector para conexión serie  
 Conector para ligação serial

DESCRIZIONE DESCRIPTION BESCHREIBUNG	PONTICELLI JUMPERS BRÜCKEN
Abilitazione configurazione Enable configuration Freigabe der Konfiguration	S3 (chiuso) S3 (closed) S3 (geschlossen)
Abilitazione calibrazione Enable calibration Freigabe der Kalibration	S4 (chiuso) S4 (closed) S4 (geschlossen)
OUT3 relé diseccitato power ON OUT3 relay OFF at power ON Ausgang 3; Relais angezogen = Kontakt geöffnet	S9 (chiuso) S9 (closed) S9 (geschlossen)
OUT3 relé eccitato power ON OUT3 relay ON at power ON Ausgang 3; Relais angezogen = Kontakt geschlossen	S10 (chiuso) S10 (closed) S10 (geschlossen)
Abilitazione autoconfigurazione istantanea Enable instantaneous self-configuration Freigabe sofortige automatische Konfigurierung	S8 (assieme a S3+S4) (chiusi) S8 (with S3+S4) (closed) S8 (mit S3+S4) (geschlossen)
Non utilizzato Not used Nicht verwendet	S7 (chiuso) S7 (closed) S7 (geschlossen)
Abilitazione ingresso da potenziometro Enable input from potentiometer Freigabe des Potentiometereingangs	S11 (chiuso) S11 (closed) S11 (geschlossen)
Abilitazione ingresso da potenziometro Enable input from potentiometer Freigabe des Potentiometereingangs	S12 (chiuso) S12 (closed) S12 (geschlossen)
Abilitazione sonda PTC Enable PTC probe Freigabe Fühler PTC	S13 (aperto) S13 (open) S13 (geöffnet)
Abilitazione sonda PT100 Enable PT100 probe Freigabe Fühler PT100	S13 (chiuso) S13 (closed) S13 (geschlossen)


DESCRIPTION DESCRIPCIÓN DESCRIÇÃO	PONTS ÉTAÏN PUENTES PONTES
Validation configuration Habilitación configuración Habilitação da configuração	S3 (fermée) S3 (cerrado) S3 (fechado)
Validation étalonnage Habilitación calibración Habilitação da calibração	S4 (fermée) S4 (cerrado) S4 (fechado)
OUT3 relais désexcité mise en marche OUT3 relé desexcitado con "power ON" OUT3 relé não excitado com alimentação ON	S9 (fermée) S5 (cerrado) S9 (fechado)
OUT3 relais excité mise en marche OUT3 relé excitado con "power ON" OUT3 relé excitado com alimentação ON	S10 (fermée) S10 (cerrado) S10 (fechado)
Validation autoconfiguration instantanée Habilitación autoconfiguración instantánea Habilitação da auto-configuração instantânea	S8 (avec S3+S4) (fermées) S8 (con S3+S4) (cerrados) S8 (com S3+S4) (fechados)
Non utilisé No utilizado Não utilizado	S7 (fermée) S7 (cerrado) S7 (fechado)
Validation entrér par potentiomètre Habilitación entrada desde potenciómetro Habilitação entrada proveniente do potenciômetro	S11 (fermée) S11 (cerrado) S11 (fechado)
Validation entrér par potentiomètre Habilitación entrada desde potenciómetro Habilitação entrada proveniente do potenciômetro	S12 (fermée) S12 (cerrado) S12 (fechado)
Validation capteur PTC Habilitación sonda PTC Habilitação para sonda PTC	S13 (ouverte) S13 (abierto) S13 (aberto)
Validation capteur PT100 Habilitación sonda P100 Habilitação para sonda PT100	S13 (fermée) S13 (cerrado) S13 (fechado)

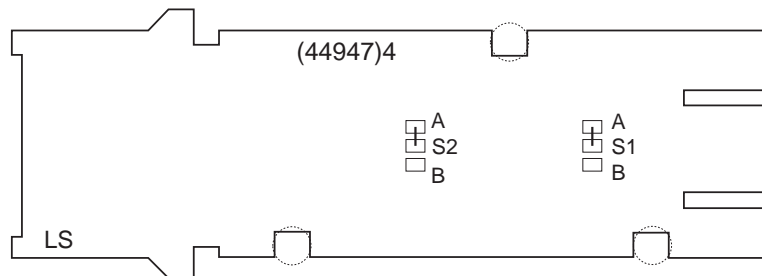

SCHEDA POWER 90/260  
POWER BOARD 90/260  
NETZTEIL-KARTE 90/260


CARTE ALIMENTATION 90/260  
FICHA ALIMENTACIÓN 90/260  
PLACA DE ALIMENTAÇÃO 90/260

DESCRIZIONE DESCRIPTION BESCHREIBUNG DESCRIPTION DESCRIPCIÓN DESCRIÇÃO	PONTICELLI JUMPERS BRÜCKEN PONTS ÉTAÏN PUENTES PONTES
OUT2 relè disexcitato power ON OUT2 relay OFF at power ON Ausgang 2; Relais angezogen = Kontakt geöffnet OUT2 relais désexcité mise en marche OUT2 relé desexcitado con "power ON" OUT2 relé não excitado com alimentação ON	S1 (posizione A) S1 (position A) S1 (Stellung A) S1 (position A) S1 (posición A) S1 (posição A)
OUT2 relè eccitato power ON OUT2 relay ON at power ON Ausgang 2; Relais angezogen = Kontakt geschlossen OUT2 relais excité mise en marche OUT2 relé excitado con "power ON" OUT2 relé excitado com alimentação ON	S1 (posizione B) S1 (position B) S1 (Stellung B) S1 (position B) S1 (posición B) S1 (posição B)

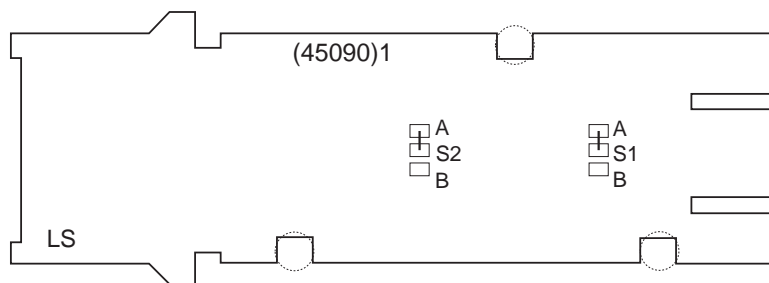


SCHEDA POWER 10/30  
 POWER BOARD 10/30  
 NETZTEIL-KARTE 10/30  
 CARTE ALIMENTATION 10/30  
 FICHA ALIMENTACIÓN 10/30  
 PLACA DE ALIMENTAÇÃO 10/30

<b>DESCRIZIONE</b> <b>DESCRIPTION</b> <b>BESCHREIBUNG</b> <b>DESCRIPTION</b> <b>DESCRIPCIÓN</b> <b>DESCRIÇÃO</b>	<b>PONTICELLI</b> <b>JUMPERS</b> <b>BRÜCKEN</b> <b>PONTS ÉTAIN</b> <b>PUNTES</b> <b>PONTES</b>
OUT2 relè diseccitato power ON OUT2 relay OFF at power ON Ausgang 2; Relais angezogen = Kontakt geöffnet OUT2 relais désexcité mise en marche OUT2 relé desexcitado con "power ON" OUT2 relé não excitado com alimentação ON	S1 (posizione A) S1 (position A) S1 (Stellung A) S1 (position A) S1 (posición A) S1 (posição A)
OUT2 relè eccitato power ON OUT2 relay ON at power ON Ausgang 2; Relais angezogen = Kontakt geschlossen OUT2 relais excité mise en marche OUT2 relé excitado con "power ON" OUT2 relé excitado com alimentação ON	S1 (posizione B) S1 (position B) S1 (Stellung B) S1 (position B) S1 (posición B) S1 (posição B)

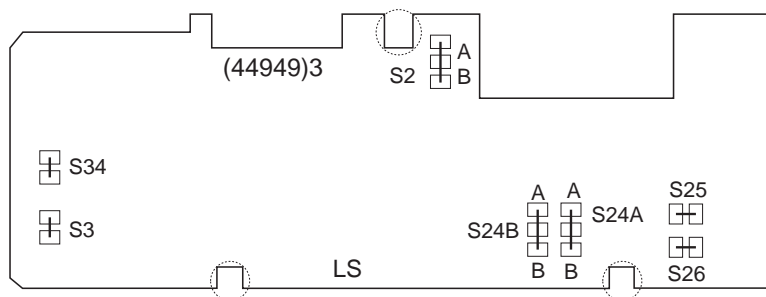

SCHEDA OUT W / INGRESSI DIGITALI  
 OUT W BOARD / DIGITAL INPUTS  
 ANALOG AUSGÄNGE / DIGITALE EINGÄNGE  
 CARTE OUT W / ENTREES NUMERIQUES  
 FICHA OUT W / ENTRADAS DIGITALES  
 PLACA OUT W / ENTRADAS DIGITAIS

DESCRIZIONE DESCRIPTION BESCHREIBUNG DESCRIPTION DESCRIPCIÓN DESCRIÇÃO	PONTICELLI JUMPERS BRÜCKEN PONTS ÉTAIN PUENTES PONTES
OUT4 relè diseccitato power ON OUT4 relay OFF at power ON Ausgang 4; Relais angezogen = Kontakt geöffnet OUT4 relais désexcité mise en marche OUT4 relé desexcitado con "power ON" OUT4 relé não excitado com alimentação ON	S2 (posizione A) S2 (position A) S2 (Stellung A) S2 (position A) S2 (posición A) S2 (posição A)
OUT4 relè eccitato power ON OUT4 relay ON at power ON Ausgang 4; Relais angezogen = Kontakt geschlossen OUT4 relais excité mise en marche OUT4 relé excitado con "power ON" OUT4 relé excitado com alimentação ON	S2 (posizione B) S2 (position B) S2 (Stellung B) S2 (position B) S2 (posición B) S2 (posição B)
Selezione ingresso logico 1 NPN Selection of 1 NPN logic input Wahl des Digital-Eingangs 1 NPN Sélection entrée logique 1 NPN Selección entrada lógica 1 NPN Seleção entrada lógica 1 NPN	S24A (posizione A) S24A (position A) S24A (Stellung A) S24A (position A) S24A (posición A) S24A (posição A)
Selezione ingresso logico 1 PNP Selection of 1 PNP logic input Wahl des Digital-Eingangs 1 PNP Sélection entrée logique 1 PNP Selección entrada lógica 1 PNP Seleção entrada lógica 1 PNP	S24A (posizione B) S24A (position B) S24A (Stellung B) S24A (position B) S24A (posición B) S24A (posição B)
Selezione ingresso logico 2 NPN Selection of 2 NPN logic input Wahl des Digital-Eingangs 2 NPN Sélection entrée logique 2 NPN Selección entrada lógica 2 NPN Seleção entrada lógica 2 NPN	S24B (posizione A) S24B (position A) S24B (Stellung A) S24B (position A) S24B (posición A) S24B (posição A)
Selezione ingresso logico 2 PNP Selection of 2 PNP logic input Wahl des Digital-Eingangs 2 PNP Sélection entrée logique 2 PNP Selección entrada lógica 2 PNP Seleção entrada lógica 2 PNP	S24B (posizione B) S24B (position B) S24B (Stellung B) S24B (position B) S24B (posición B) S24B (posição B)

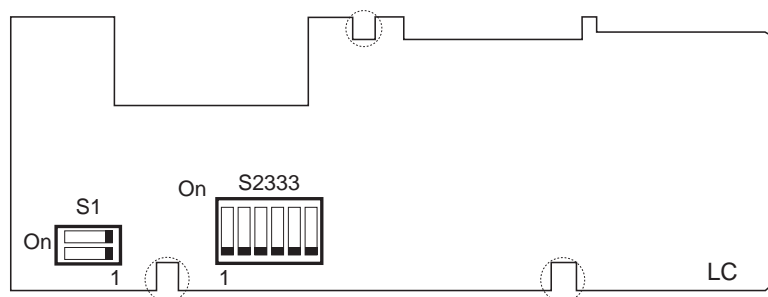

USCITA ANALOGICA W1 (DIP SWITCHES S2333)  
 ANALOGUE OUTPUT W1 (DIP SWITCHES S2333)  
 ANALOGER AUSGANG W1 (DIP SWITCHES S2333)  
 SORTIE ANALOGIQUE W1 (DIP SWITCHES S2333)  
 SALIDA ANALÓGICA W1 (DIP SWITCHES S2333)  
 SAÍDA ANALÓGICA W1 (DIP SWITCHES S2333)


TIPO USCITA OUTPUT TYPE AUSGANGSTYP TYPE SORTIE TIPO DE SALIDA TIPO DE SAÍDA	SELEZIONE ON SELECTION ON WAHL ON SELECTION ON SELECCIÓN ON SELEÇÃO ON	SELEZIONE OFF SELECTION OFF WAHL OFF SELECTION OFF SELECCIÓN OFF SELEÇÃO OFF
0/4...20mA	5	4-6
0...10V	4-6	5

USCITA ANALOGICA W2 (DIP SWITCHES S2333)  
 ANALOGUE OUTPUT W2 (DIP SWITCHES S2333)  
 ANALOGER AUSGANG W2 (DIP SWITCHES S2333)  
 SORTIE ANALOGIQUE W2 (DIP SWITCHES S2333)  
 SALIDA ANALÓGICA W2 (DIP SWITCHES S2333)  
 SAÍDA ANALÓGICA W2 (DIP SWITCHES S2333)

TIPO USCITA OUTPUT TYPE AUSGANGSTYP TYPE SORTIE TIPO DE SALIDA TIPO DE SAÍDA	SELEZIONE ON SELECTION ON WAHL ON SELECTION ON SELECCIÓN ON SELEÇÃO ON	SELEZIONE OFF SELECTION OFF WAHL OFF SELECTION OFF SELECCIÓN OFF SELEÇÃO OFF
0/4...20mA	2	1-3
0...10V	1-3	1

USCITA ALIMENTAZIONE TRASMETTITORE (DIP SWITCHES S1)  
 TRANSMITTER SUPPLY OUTPUT (DIP SWITCHES S1)  
 AUSGANG FÜR SENSORSPEISUNG (DIP SWITCHES S1)  
 SORTIE DE ALIMENTATION POUR TRANSMETTEUR (DIP SWITCHES S1)  
 SALIDA DE ALIMENTACIÓN PARA TRANSMISOR (DIP SWITCHES S1)  
 SAÍDA DE ALIMENTAÇÃO PARA TRANSMISSOR (DIP SWITCHES S1)

TIPO USCITA OUTPUT TYPE AUSGANGSTYP TYPE SORTIE TIPO DE SALIDA TIPO DE SAÍDA	SELEZIONE ON SELECTION ON WAHL ON SELECTION ON SELECCIÓN ON SELEÇÃO ON	SELEZIONE OFF SELECTION OFF WAHL OFF SELECTION OFF SELECCIÓN OFF SELEÇÃO OFF
0V	-	1-2
10V	2	1
24V	1	2

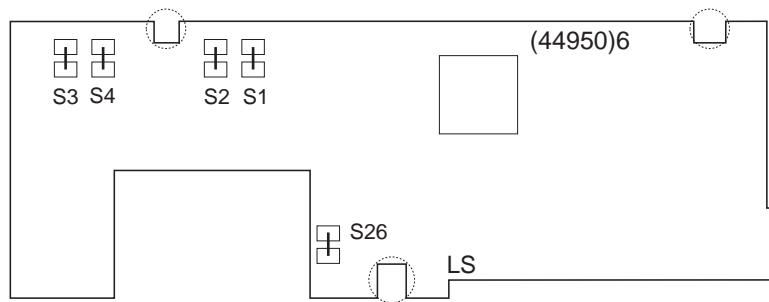

SCHEDA SERIALE / SPR  
 SERIAL BOARD  
 KARTE FÜR DIE SERIELLE ÜBERTRAGUNG  
 CARTE SÉRIE  
 FICHA SERIE  
 PLACA DE COMUNICAÇÃO DIGITAL

INGRESSO SPR SPR INPUT SPR EINGANG ENTREE SPR ENTRADA ENTRADA	PONTICELLI (chiusi) JUMPERS (closed) BRÜCKEN (geschlossen) PONTS ÉTAIN (fermées) PUENTES (cerrados) PONTES (fechados)	PONTICELLI (aperti) JUMPERS (open) BRÜCKEN (geöffnet) PONTS ÉTAIN (ouvertes) PUENTES (abiertos) PONTES (abertos)
0/4...20mA	S4-S26	S1-S2-S3
0...10V / Potenziometro Potentiometer Potentiometer Potentiomètre Potenciómetro Potenciômetro	S1-S26	S2-S3-S4
TA 50mAac	S2-S3-S4	S1-S26